


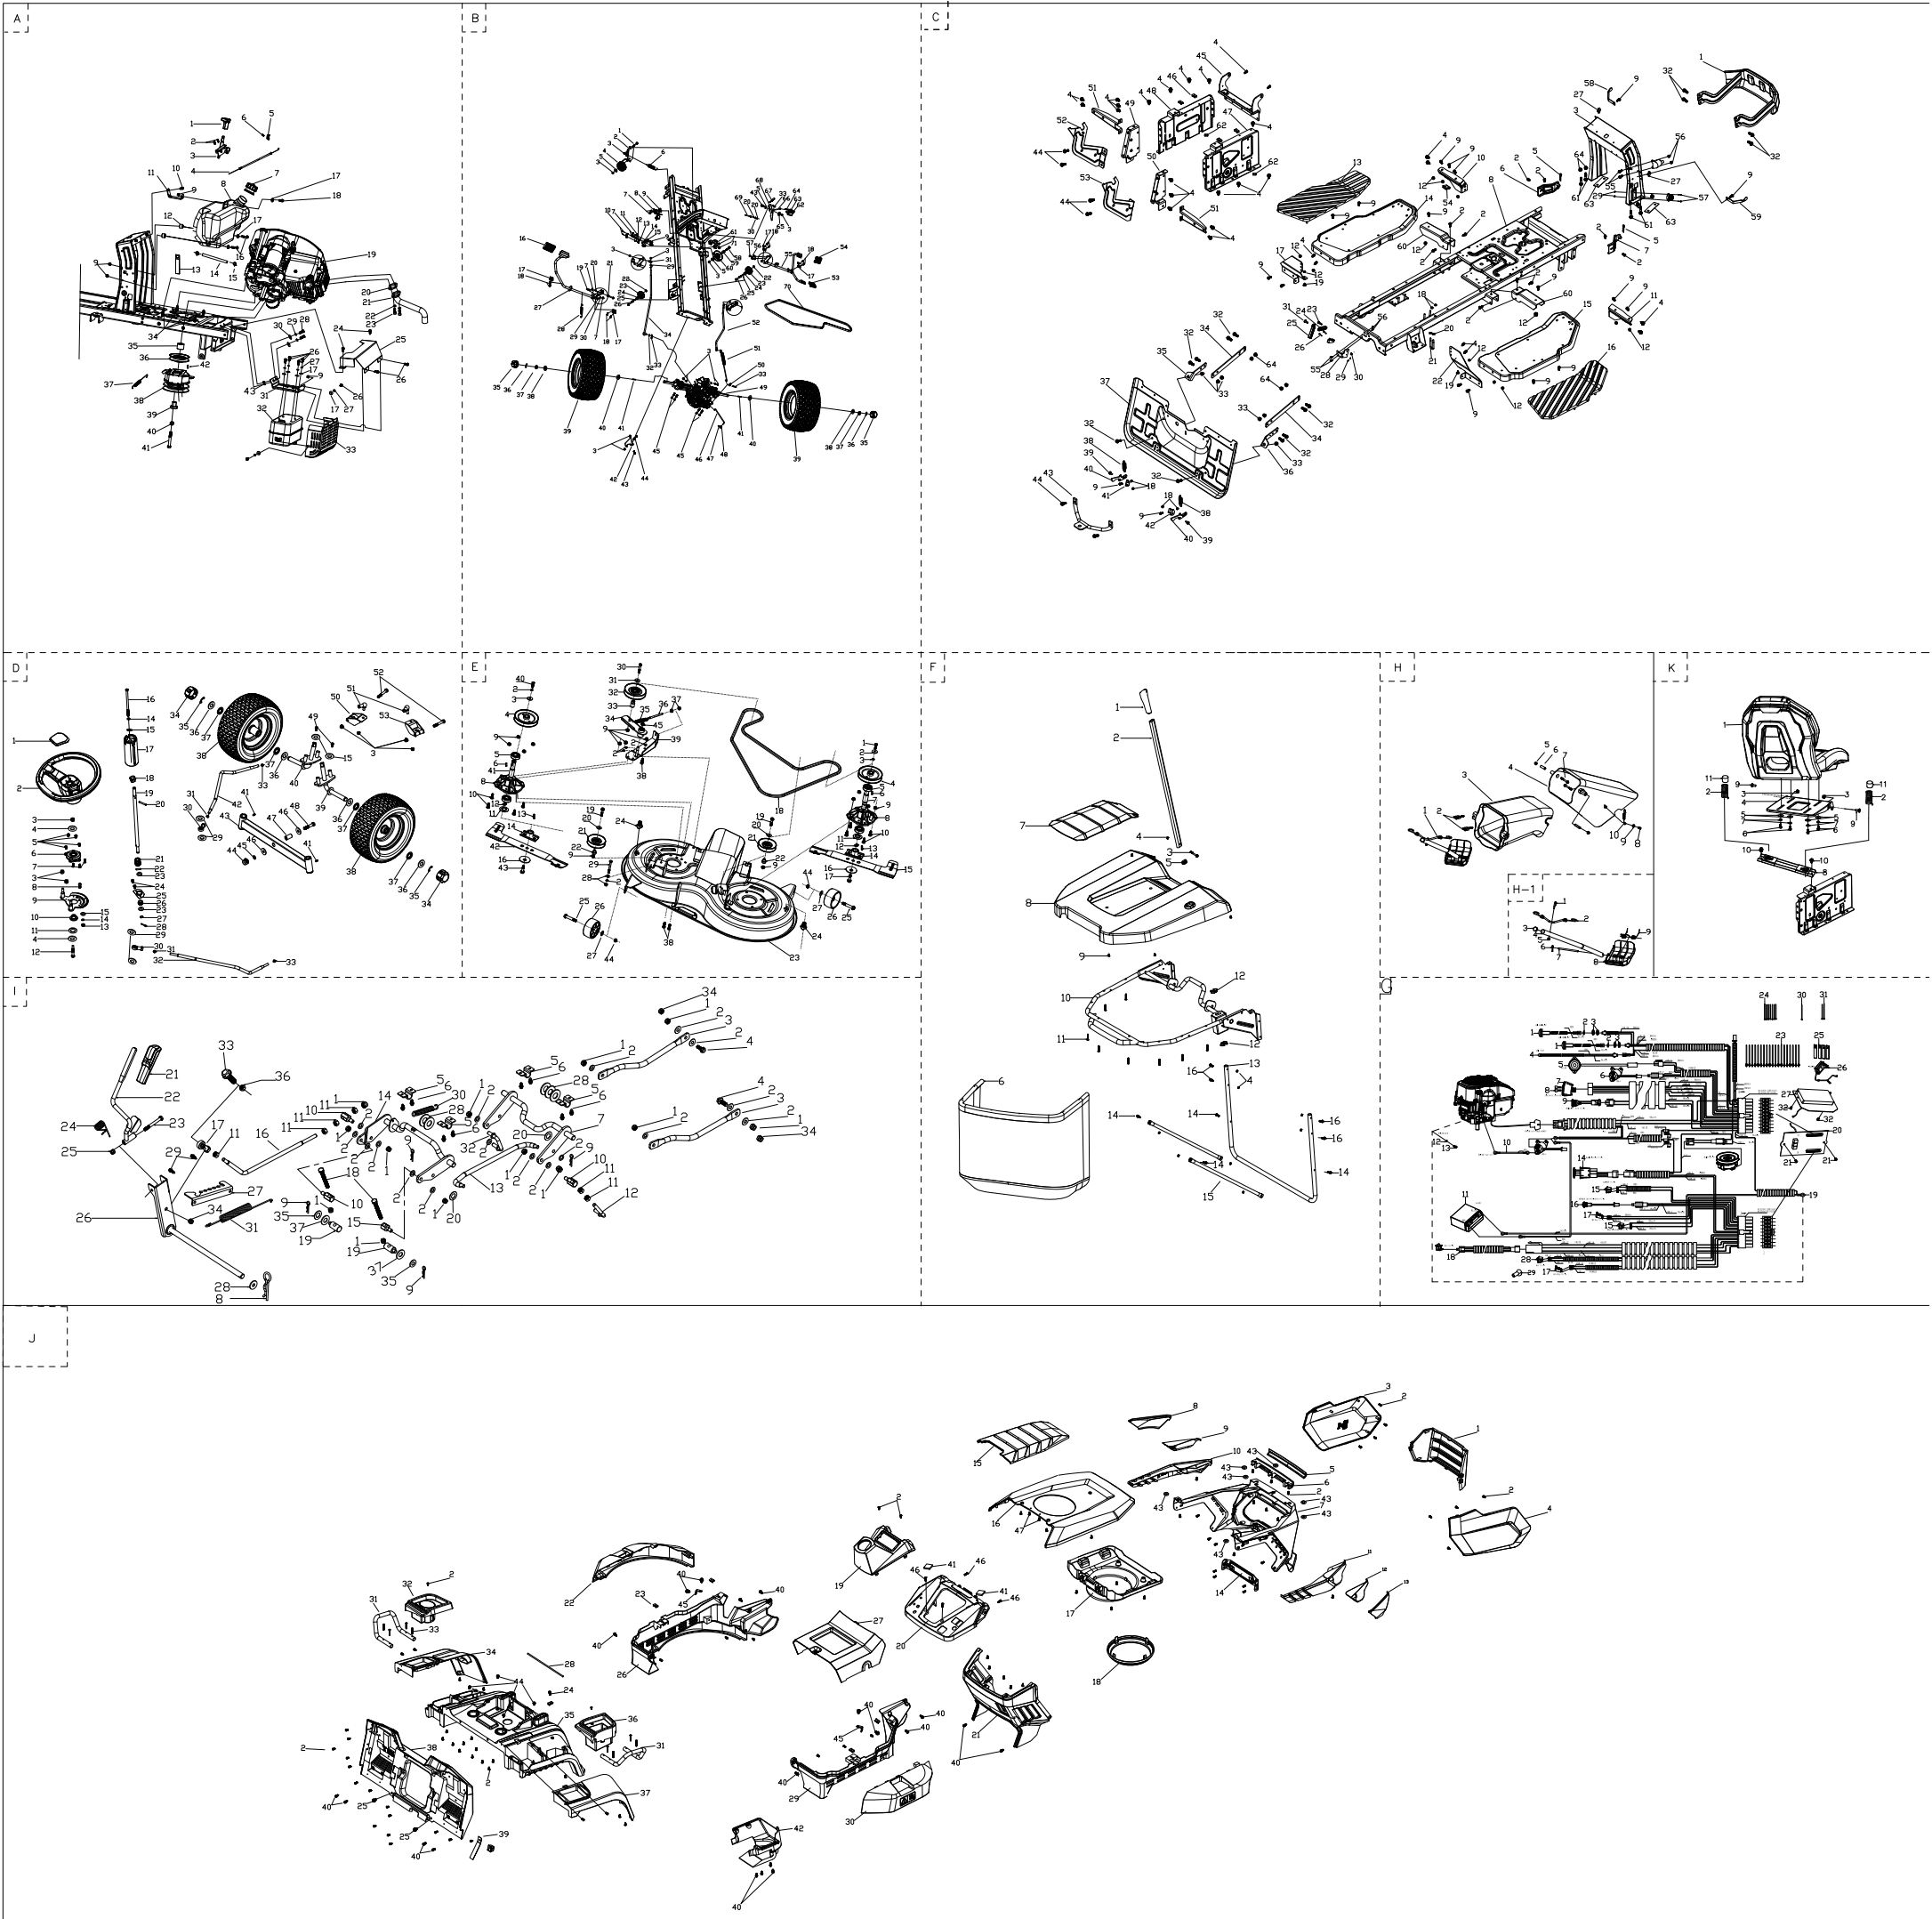

Pos.no.	Part name	Qty
A-01	throttle Lever	1
A-02	Screw	2
A-03	throttle fixed plate	1
A-04	Speed control cable	1
A-05	Plate	1
A-06	Bolt	1
A-07	Tank cover	1
A-08	Fuel Tank	1
A-09	Nut	5
A-10	Screw	1
A-11	Fuel tank bracket	1
A-12	Sleeve	2
A-13	Oil Pipe Fixing Clip	1
A-14	Tubing	1
A-15	Clamp	2
A-16	Bolt	2
A-17	Flat Washer	9
A-18	Bolt	1
A-19	Engine	1
A-20	Washer	1
A-21	Muffler exhaust pipe	1
A-22	Washer	2
A-23	Screw	2
A-24	Gasket of Cylinder Head	2
A-25	Thermal insulation panels	1
A-26	Bolt	8
A-27	Spring washer	6
A-28	Bolt	2
A-29	Spring washer	2
A-30	Flat Washer	2
A-31	Muffler cover	1
A-32	silencer	1
A-33	Muffler cover	1
A-34	Screw	4
A-35	Pulley Sleeve	1
A-36	Engine pulleys	1
A-37	Spring	1
A-38	clutch	1
A-39	Sleeve	1
A-40	Washer	1
A-41	Blade Bolt	1
A-42	Gasket of Cylinder Head	1
A-43	Nut	2
B-01	Bolt	1
B-02	Assembly	1
B-03	Nut	12

B-04	Tensioning wheel assembly	1
B-05	Flat Washer	3
B-06	Spring	1
B-07	Nut	7
B-08	Fixed plate	1
B-09	Bolt	4
B-10	Screw	2
B-11	Fixed plate	1
B-12	press plate	1
B-13	Nut	2
B-14	Gasket of Cylinder Head	2
B-15	Micro switch support bracket	1
B-16	pedal	1
B-17	pedal pressure plate	4
B-18	Screw	8
B-19	press plate for brake	1
B-20	Nut	3
B-21	Bolt	1
B-22	Nut	2
B-23	Idler assembly	2
B-24	Sleeve	2
B-25	Spring washer	2
B-26	Bolt	2
B-27	pedal	1
B-28	Spring	1
B-29	Nut	3
B-30	Spring washer	2
B-31	Hexagonal joint	1
B-32	Flat Washer	1
B-33	Split Pin	3
B-34	Tie rod assembly	1
B-35	hubcap	2
B-36	Open retaining rings	2
B-37	Washer	2
B-38	Washer for wheels	2
B-39	Wheel	2
B-40	Flat Washer	2
B-41	Flat Key	2
B-42	Fixed plate	1
B-43	Bolt	2
B-44	Bolt	1
B-45	Bolt	4
B-46	Unloading tie rod	1
B-47	Split Pin	1
B-48	Flat Washer	1
B-49	Transmission	1
B-50	Pin	1

B-51	Spring	1
B-52	Brake lever assembly	1
B-53	back pedal	1
B-54	forward pedal	1
B-55	Walking pedal assembly	1
B-56	Reverse gear switch pressure plate	1
B-57	screw	2
B-58	Bolt	1
B-59	Sleeve	1
B-60	Idler assembly	1
B-61	Fixed plate	1
B-62	Pin	1
B-63	Parking brake lever	1
B-64	Limit wire clamp	1
B-65	Sleeve	1
B-66	Parking push rod	1
B-67	Spring	1
B-68	Parking board	1
B-69	Bolt	1
B-70	Belt	1
B-71	Flat Washer	1
C-01	B-bumper assembly	1
C-02	Screw	10
C-03	Support frame assembly	1
C-04	Screw	28
C-05	Split Pin	2
C-06	Left Bracket	1
C-07	Right Bracket	1
C-08	Frame assembly	1
C-09	Bolt	19
C-10	Foot pedal left front fixing plate	1
C-11	Foot pedal right front fixing plate	1
C-12	Nut	13
C-13	Left foot cushion	1
C-14	Left floor panel	1
C-15	Right floor panel	1
C-16	Right foot cushion	1
C-17	Fixed plate	1
C-18	Nut	6
C-19	Bolt	2
C-20	Nut	2
C-21	U-shaped protective frame	1
C-22	Fixed plate	1
C-23	Bolt	1
C-24	pressure plate	1
C-25	pressure plate	1
C-26	Gasket of Cylinder Head	2

C-27	Nut	2
C-28	Fixed plate	1
C-29	Nut	4
C-30	Nut	1
C-31	Screw	1
C-32	Bolt	14
C-33	Nut	6
C-34	extension plate	2
C-35	Fixed plate	1
C-36	Fixed plate	1
C-37	Rear lower bezel	1
C-38	Spring	2
C-39	Bolt	2
C-40	Hook	2
C-41	Fixed plate	1
C-42	Fixed plate	1
C-43	Fixed plate	1
C-44	Bolt	6
C-45	Seat bracket assembly	1
C-46	Nut	4
C-47	Support plate	1
C-48	Support plate	1
C-49	Strengthening plate	1
C-50	Strengthening plate	1
C-51	Fixed plate	2
C-52	Left bracket assembly	1
C-53	Right bracket assembly	1
C-54	Cushion	1
C-55	Bolt	4
C-56	Nut	4
C-57	Screw	2
C-58	Left positioning board	1
C-59	Right positioning board	1
C-60	Fixed plate	2
C-61	Bolt	4
C-62	Nut	2
C-63	Shock-absorbing pads	2
C-64	Nut	8
D-1	Steering wheel cover	1
D-2	Steering wheel	1
D-3	Nut	7
D-4	Washer	2
D-5	Bolt	4
D-6	Steering gear bearing seat	1
D-7	Screw	3
D-8	Screw	1
D-9	Steering gear assembly	1

D-10	Sleeve	1
D-11	Flat Washer	1
D-12	Bolt	1
D-13	Nut	1
D-14	Spring washer	2
D-15	Flat Washer	4
D-16	Bolt	1
D-17	Steering wheel connector sleeve	1
D-18	steering column jacket	1
D-19	Steering axle	1
D-20	Pin	1
D-21	Steering wheel teeth	1
D-22	Pin	1
D-23	Flat Washer	2
D-24	Screw	2
D-25	Ball cover pressure plate	1
D-26	Steering ball sleeve	1
D-27	Lock Ring	1
D-28	Split Pin	1
D-29	Flat Washer	4
D-30	Bearing	2
D-31	Nut	2
D-32	connecting rod	1
D-33	Nut	2
D-34	hubcap	2
D-35	Open retaining rings	2
D-36	Flat Washer	4
D-37	Washer	4
D-38	Wheel	2
D-39	Right front wheel axle assembly	1
D-40	Left front wheel axle assembly	1
D-41	GREASE FITTING	2
D-42	Left steering linkage	1
D-43	Front axle assembly (with shaft sleeve)	1
D-44	Nut	1
D-45	Spring washer	1
D-46	Flat Washer	2
D-47	Sleeve	1
D-48	Bolt	1
D-49	Bolt	2
D-50	Left steering linkage rocker arm assembly	1
D-51	D-shaped universal ball joint assembly	2
D-52	Bolt	2
D-53	Right steering linkage rocker arm assembly	1
E-01	Bolt	1
E-02	Spring washer	6
E-03	Flat Washer	2

E-04	pulley assembly	2
E-05	Deep Groove Ball Bearings	4
E-06	Flat Key	2
E-07	pulley shaft	1
E-08	Cutterhead pulley seat	2
E-09	Nut	14
E-10	Bolt	8
E-11	dust cover	2
E-12	Lock Ring	2
E-13	Flat Key	2
E-14	Blade holder assembly	2
E-15	Left blade	1
E-16	Blade Washer	2
E-17	Blade Bolt	1
E-18	Belt	1
E-19	Bolt	2
E-20	Flat Washer	2
E-21	Idler assembly	2
E-22	Sleeve	2
E-23	Cutterhead welding assembly	1
E-24	Cleaning connector	2
E-25	Bolt	2
E-26	4-inch guide wheel	2
E-27	Flat Washer	2
E-28	Nut	2
E-29	Bolt	1
E-30	Bolt	1
E-31	Flat Washer	1
E-32	Tensioning wheel assembly	1
E-33	Sleeve	1
E-34	tensioning wheel swing arm assembly	1
E-35	Spring	1
E-36	Bolt	1
E-37	Nut	2
E-38	Bolt	3
E-39	Fixed plate	1
E-40	Bolt	1
E-41	axle	1
E-42	Right blade	1
E-43	Blade Bolt	1
E-44	Nut	2
E-45	Nut	1
F-01	Handle	1
F-02	Lever	1
F-03	Bolt	1
F-04	Nut	9
F-05	Flip rod plug	1

F-06	280L Fabric Bag Assembly	1
F-07	Grass box handle cover plate	1
F-08	Grass Bag Top Cover	1
F-09	screw	4
F-10	bracket assembly	1
F-11	Gasket of Cylinder Head	8
F-12	Sleeve	2
F-13	branch pipe	1
F-14	Bolt	4
F-15	branch pipe	2
F-16	Bolt	4
G-01	headlight wire	2
G-02	"o" Ring $\phi 20 \times \phi 2.3$	2
G-03	Nut	4
G-04	headlight wire	1
G-05	wire	1
G-06	relay	1
G-07	Switch	1
G-08	Key	2
G-09	wire	1
G-10	wire	1
G-11	Battery	1
G-12	Washer	1
G-13	Blade Bolt	1
G-14	wire	1
G-15	Switch(normal close)	2
G-16	wire	1
G-17	Switch	2
G-18	wire	1
G-19	wire	1
G-20	Circuit boards	1
G-21	screw	2
G-23	Tie	19
G-24	Tie	7
G-25	Oil Pipe Fixing Clip	4
G-26	European chargers	1
G-27	electronic display	1
G-28	Switch(normal open)	1
G-29	protecting push	1
G-30	Tie	1
G-31	Tie	2
G-32	screw	2
H-01	grass plug component	1
H-01-01	Bull tendon rope compression rod	1
H-01-02	Bull tendon rope	1
H-01-03	Handle Plug	1
H-01-04	Lever	1

H-01-05	Nut	1
H-01-06	Split Pin	1
H-01-07	shaft	1
H-01-08	Plug	1
H-01-09	Spring	1
H-02	Knob	2
H-03	Rear row grass tube	1
H-04	Front row straw tubes	1
H-05	Nut	2
H-06	Sleeve	2
H-07	Bolt	2
H-08	Screw	1
H-09	Gasket of Cylinder Head	1
H-10	Tension springs	1
I-01	Nut	14
I-02	Flat Washer	17
I-03	Lever	2
I-04	Bolt	2
I-05	pedal pressure plate	4
I-06	Screw	8
I-07	BRACKET ASSEMBLY	1
I-08	Split Pin	1
I-09	Split Pin	4
I-10	Raise hexagonal joint	4
I-11	Nut	8
I-12	Lever	1
I-13	connecting rod	1
I-14	BRACKET ASSEMBLY	1
I-15	hexagonal joint	1
I-16	Lever	1
I-17	Bearing	1
I-18	Bolt	2
I-19	Adjusting rod	2
I-20	Washer	2
I-21	Lever	1
I-22	Handle	1
I-23	Bolt	1
I-24	Torsion springs	1
I-25	Nut	1
I-26	arm bracket	1
I-27	Height adjust board	1
I-28	Washer	6
I-29	Screw	2
I-30	Spring	1
I-31	Spring	1
I-32	Lever	1
I-33	Bolt	1

I-34	Nut	3
I-35	Flat Washer	2
I-36	Nut	1
I-37	Flat Washer	2
J-01	Front	1
J-02	screw	90
J-03	Front Left Cover	1
J-04	Front Right Cover	1
J-05	Line lampshade	1
J-06	Linear lamp holder	1
J-07	Front seat of the car	1
J-08	lamp cover	1
J-09	reflector mask	1
J-10	lamp holder	1
J-11	lamp holder	1
J-12	reflector mask	1
J-13	lamp cover	1
J-14	Fixed plate	1
J-15	Handle plate	1
J-16	Front Top Cover	1
J-17	Wind guide upper cover	1
J-18	Air guide undercover	1
J-19	Lower cover of steering wheel	1
J-20	Front control panel	1
J-21	Steering wheel base	1
J-22	Left cutterhead guard	1
J-23	Nut	5
J-24	Bolt	1
J-25	Gasket of Cylinder Head	2
J-26	deck cover	1
J-27	Foot pedal cover	1
J-28	Battery pressure rod	1
J-29	deck cover	1
J-30	Right cutterhead guard	1
J-31	Vehicle armrest	2
J-32	Left cup holder	1
J-33	screw	8
J-34	"Left Body Cover	1
J-35	Vehicle seat	1
J-36	Right cup holder	1
J-37	Right Body Cover	1
J-38	gauge	1
J-39	plate	1
J-40	Gasket of Cylinder Head	20
J-41	Cushion	2
J-42	Cover	1
J-43	Flat Washer	7

J-44	Bolt	4
J-45	Fixed plate	2
J-46	screw	4
J-47	screw	2
K-01	Riding Seat	1
K-02	Spring	2
K-03	Nut	2
K-04	Fixed plate	1
K-05	Flat Washer	4
K-06	Bolt	4
K-07	Spring washer	4
K-08	Fixed plate	1
K-09	Bolt	2
K-10	Screw	2
K-11	Spring sleeve	2
L-01	wrench	2
L-02	wrench	1
L-03	wrench	1
L-04	screwdriver	1
L-05	sleeve	1
L-06	funnel	1
L-07	Bayonet funnel	1
L-08	fuse	1
L-09	fuse	1