



Position	Part name	Qty
A3-01	Screw	3
A3-02	Engine Cover	1
B1-01	Nut	3
B1-02	Recoil start	1
C5-01	Blower Housing	1
D1-01	Nut	1
D1-02	Start-up Hub	1
D1-03	Fan	1
D1-04	Bolt I	1
D1-05	Bolt	1
D1-06	Spark plug	1
D1-07	Ignition	1
D1-08	Flywheel	1
D1-09	Back plate	1
D1-10	Bolt	2
E1-01	Brake Assy	1
E1-02	Bolt	2
E1-03	Bolt	1
E1-04	Bolt II	2
F1-01	Bolt	3
F1-02	Muffler cover	1
F1-03	Bolt	2
F1-04	Muffler assy	1
F1-05	Gasket of Muffler	1
F1-06	Muffler Bush	2
G1-01	Bolt	4
G-02	Cylinder Head Cover	1
G-03	Gasket of Cylinder Head Cover	1
G-04	Bolt	4
G-05	Rocker of Valve	2
G-06	pin	1
G-07	Spring Coil of outlet Valve	2
G-08	Spring of Valve	2
G-09	Oil Seal	2
G-10	Cylinder Head Assy	1
G-11	Inlet valve	2
G-12	Gasket of Cylinder Head	1
G-13	Guide Board of Handspike	2
G-14	Tappet	2
G-15	Camshaft Assy	1
H1-01	Bolt	2
H1-02	Paper Gasket of Inlet Pipe	1
H1-03	Air Inlet Pipe	1
H1-04	Paper Gasket of Carburetor	1
H1-05	Gasket	1
H1-06	Exhuast Pipe	1

H1-07	Nut	2
H1-08	Foam Filter Element	1
H1-09	Air Filter Upper Cover	1
H1-10	Primer	1
H1-11	Circlip	2
H1-12	Primer	1
H1-13	Carburetor	1
H1-14	Air Filter Pedestal	1
J-01	Lubricating Gauge	1
J-02	"o" Ring $\phi 20 * \phi 2.3$	1
J-03	Lubricating Pipe Assy	1
J-04	Screw	2
J-05	"O" Ring $\phi 21 * \phi 2.3$	1
K-01	Crankcase	1
K-02	Oil Seal	1
K-03	Speed Regulator Rocker Spindle	1
K-04	Flat Washer	1
K-05	Oil Seal	1
K-06	Springness Split Pin	1
K-07	Valve Element	1
K-08	Screw	1
K-09	Gasket of Respirator Cover	1
K-10	Respirator Cover Plate	1
K-11	Screw	3
K-12	Locating Pin	2
L-01	Piston Ring I	1
L-02	Piston Ring II	1
L-03	Scraper Ring	2
L-04	Bushing Ring	1
L-05	Piston	1
L-06	Spring	2
L-07	Piston Pin	1
L-08	Connecting Rod Assy	1
M1-01	Crankshaft	1
M1-02	Gasket of Gear	1
N-01	Locating Pin of Crankcase	2
N-02	Gasket of Crankcase	1
N-03	Washer	2
N-04	Circlip of Gear shaft	1
N-05	Gear Shaft Assy	1
N-06	Sliding Sleeve	1
N-07	Gear Shaft Hold-down Plate	1
N-08	Bolt	1
N-09	Crankcase Cover	1
N-10	Bolt	7
N-11	Oil Seal	1
P1-01	Handspike of Valve	1

P1-02	Spring of Valve	1
P1-03	Bolt	1
P1-04	Speed Regulator Rocker	1
P1-05	Nut	1
P1-06	Bolt	2
P1-07	Plate	1
P1-08	Spring	1
Q-01	Fuel Tank Cap	1
Q-02	Seal Gasket of Fuel Tank Cap	1
Q-03	Connecting Rope	1
Q-04	Fuel Tank	1
Q-05	Bolt	1
Q-06	Spring washer	1
Q-07	Washer	2
Q-08	Bolt	1
Q-09	Gasket	2
Q-10	Nut	1
Q-11	Oil Pipe	1
Q-12	Oil Pipe Circlip II	1
Q-13	Oil Pipe Fixing Clip	1
Q-14	Filtering Net Duct of Fuel	1
Q-15	Oil Pipe Circlip I	1
Q-16	Lubricate Filtering Net	1