



MUFFLER SHIELD

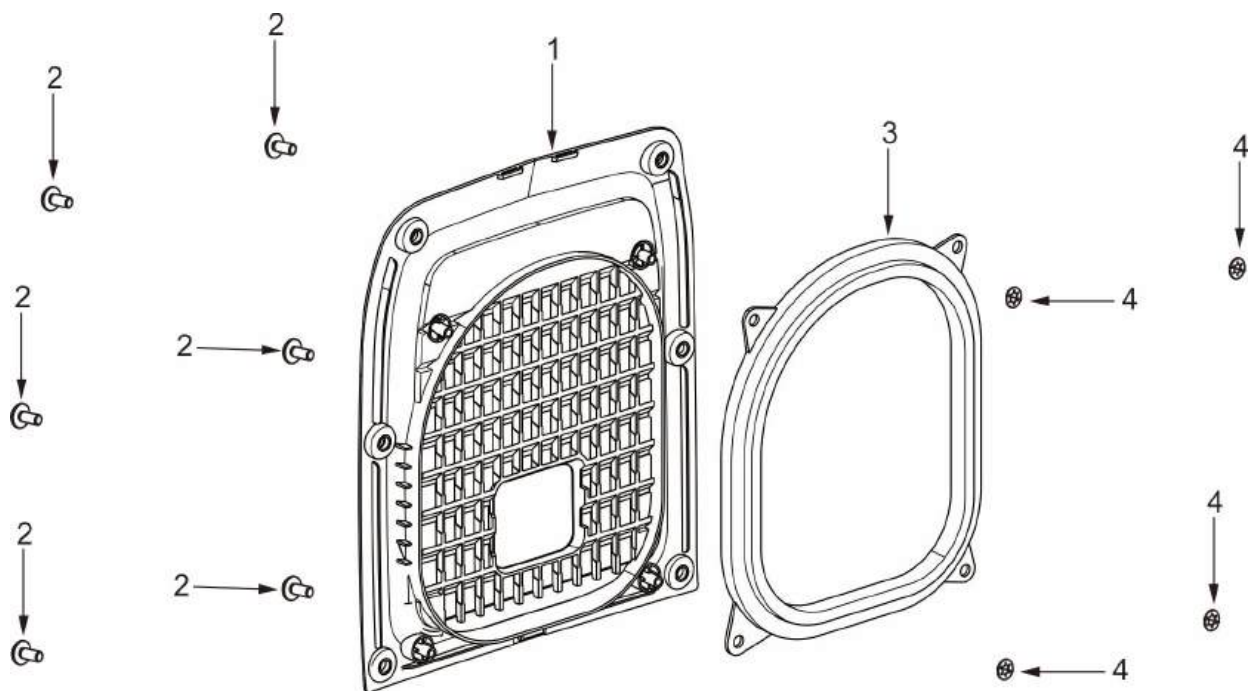


REF.NO.	PART NO	DESCRIPTION	Q'TY
3-1	474.2420.001V.04.00	Muffler shield	1
3-2	0818.05016.00.07	Screw	6
3-3	474.7824.001V.00.00	Muffler sealant sleeve	1
3-4	467.5598.001V.00.00	Plum ring	4

LEFT SHELL

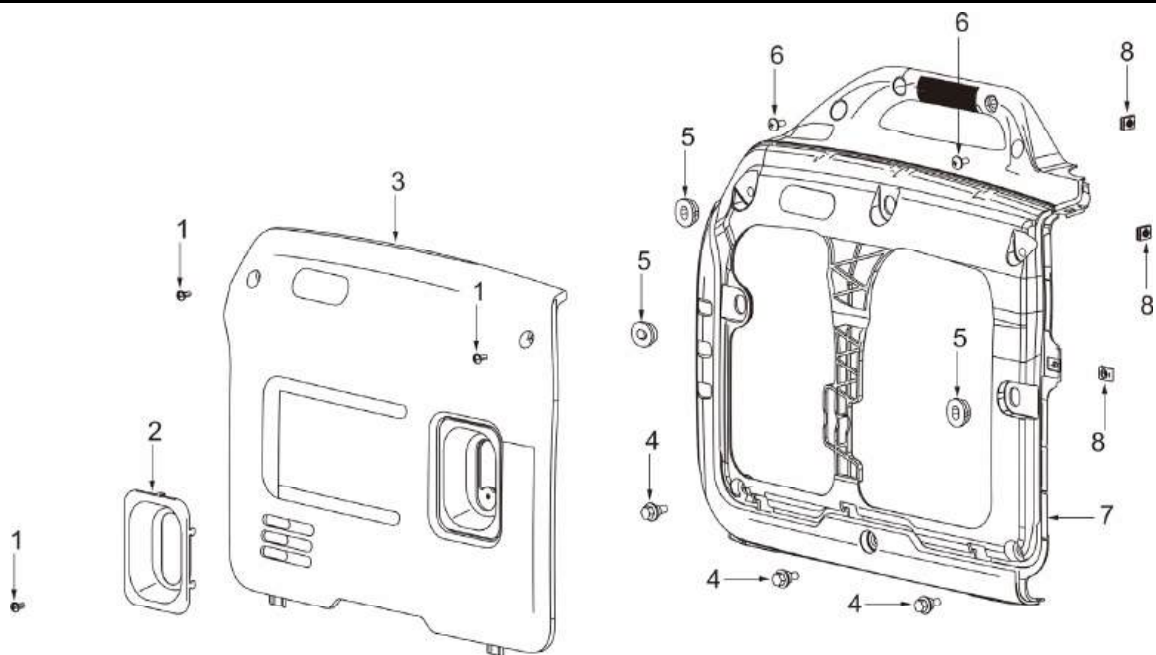


REF.NO.	PART NO	DESCRIPTION	Q'TY
4-1	0818.05010.00.07	Screw	3
4-2	469.7866.001V.00.00	Handle trim panel	1
4-3	469.5596.003V.P4.00	ornament shell	1
4-4	467.4789.001V.00.00	step bolts	3
4-5	467.5522.002V.00.00	sheath	3
4-6	0818.05016.00.07	Screw	2
4-7	469.2220.002V.04.00	Left shell	1
4-8	6178.05000.00.04	Nut	3

ENGINE

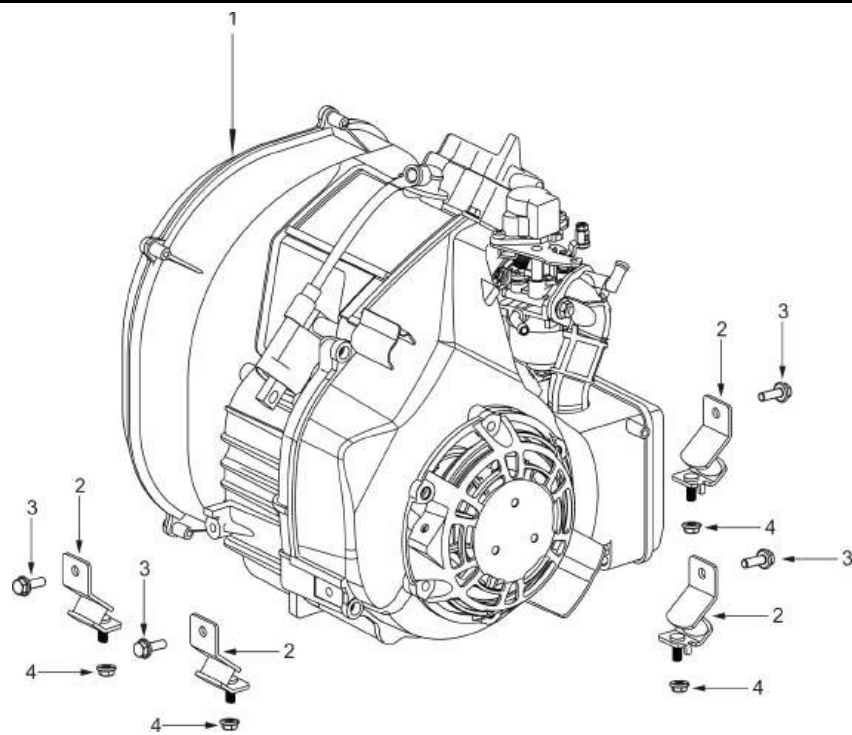


REF.NO.	PART NO	DESCRIPTION	Q'TY
1-1	BP00.083.001.04	Engine	1
1-2	467.3360.001V.00.00	Shock pad	4
1-3	5789.06012.00.01	Bolt	4
1-4	6177.06000.00.01	Nut	4

TANK

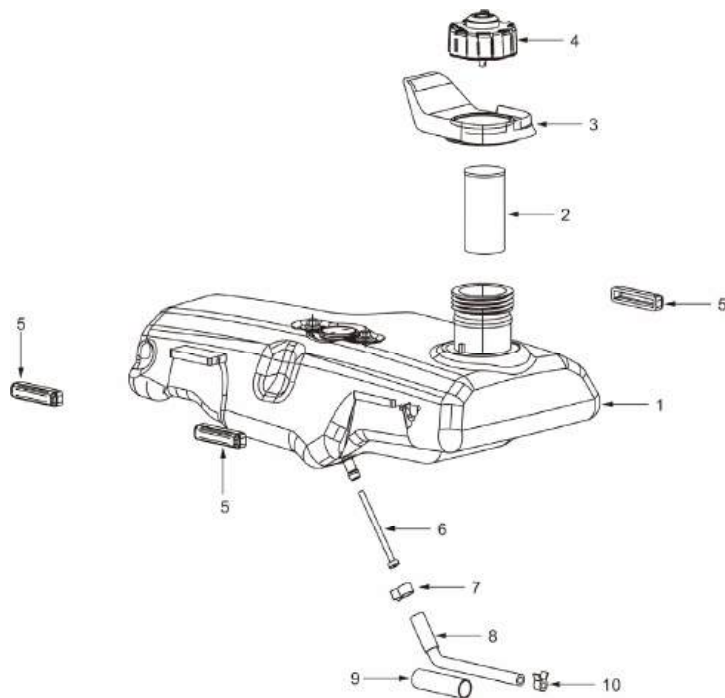


REF.NO.	PART NO	DESCRIPTION	Q'TY
2-1	469.3200.001V.00.00	Tank,Fuel	1
2-2	467.3200.001V.00.02	Fuel filter	1
2-3	469.3200.001V.00.03	Sheath	1
2-4	467.3200.C05V.00.01	Tank cap	1
2-5	469.7868.001V.00.00	Sheath	3
2-6	P70.3208.001V.00.00	Filt tip	1
2-7	458.2360.004V.00.00	Ferrule	1
2-8	469.2330.C01V.00.00	Oil tube	1
2-9	467.2332.006V.00.00	Sheath	1
2-10	458.2360.003V.00.00	Ferrule	1

RIGHT SHELL

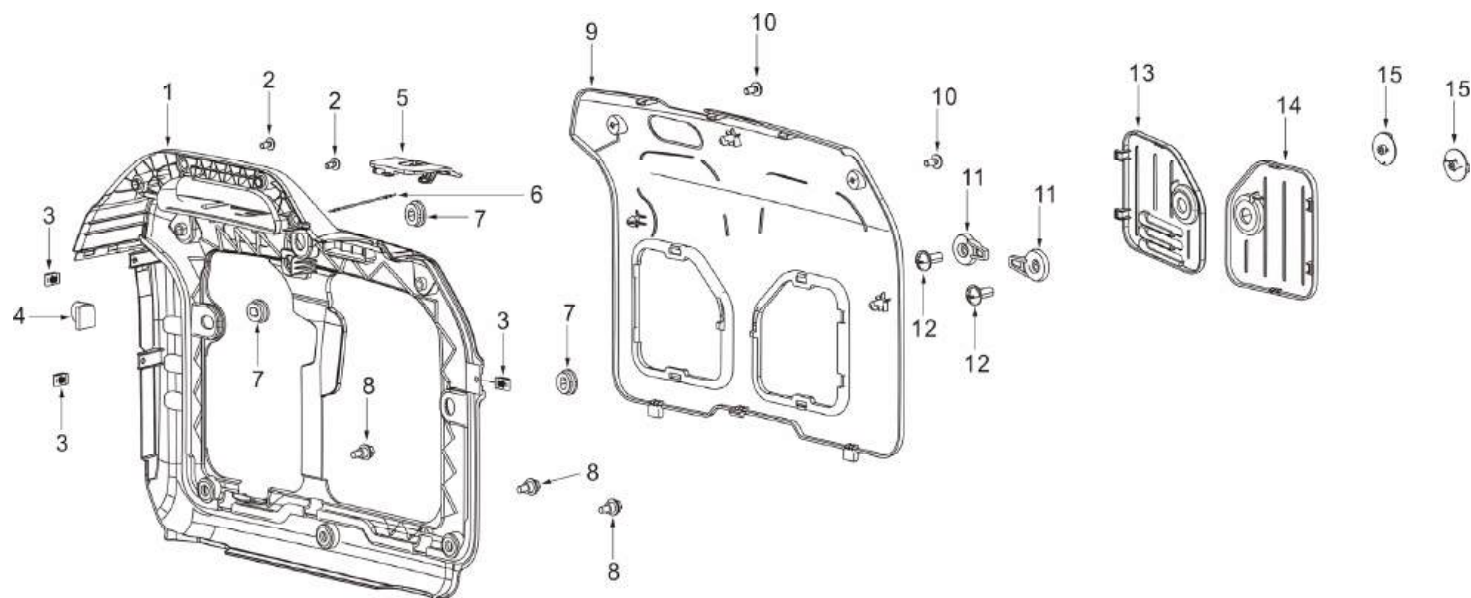


REF.NO.	PART NO	DESCRIPTION	Q'TY
5-1	469.2222.002V.04.00	Right shell	1
5-2	0818.05016.00.07	Cross recessed pan head screw	2
5-3	6178.05000.00.04	Nut	3
5-4	467.6234.002V.00.00	sheath	1
5-5	469.4259.001V.P4.00	Spark-plug outer cover	1
5-6	469.4562.001V.00.00	Anti loss rubber strip	1
5-7	467.5522.002V.00.00	sheath	3
5-8	467.4789.001V.00.00	step bolts	3
5-9	469.5596.004V.P4.00	Right exterior cover	1
5-10	0808.05010.00.07	Screw	2
5-11	469.6345.001V.04.00	Knob limit card	2
5-12	0845.04012.00.01	Screw	2
5-13	474.7540.001V.P4.00	Oil maintenance cover	1
5-14	469.7530.002V.P4.00	Air filter maintenance cover	1
5-15	469.1560.001V.04.00	Knob	2

BASE PLATE COMPONENTS/INVERTER

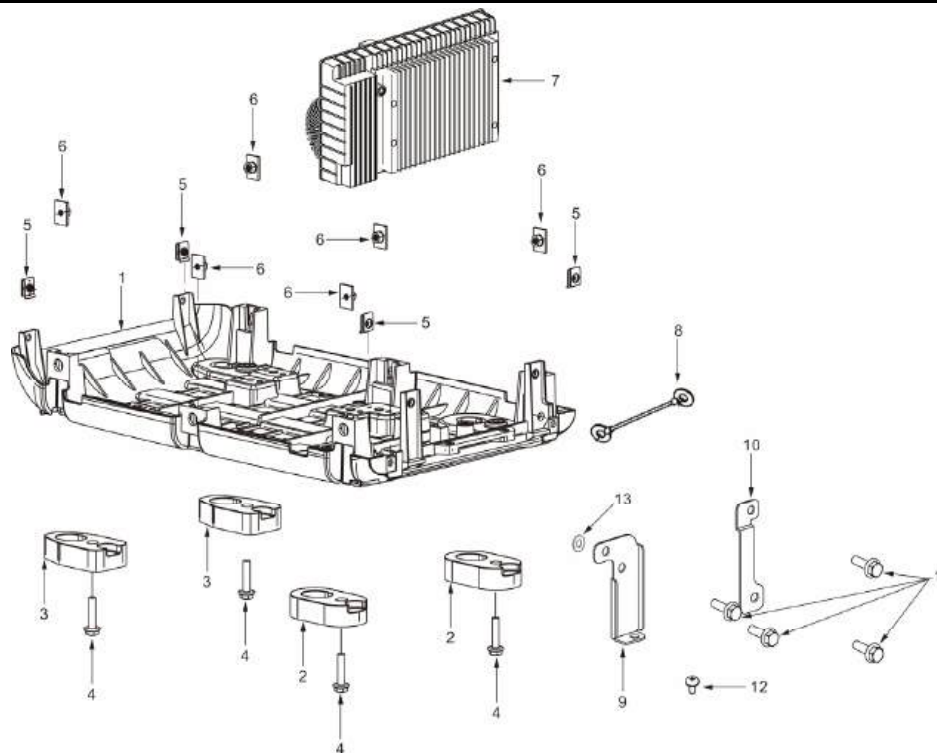

REF.NO.	PART NO	DESCRIPTION	Q'TY
6-1	469.3340.001V.00.00	Base plate	1
6-2	469.3350.002V.00.00	Shock absorber of unit	2
6-3	469.3350.001V.00.00	Shock absorber of unit	2
6-4	5789.06018.00.01	Bolt	4
6-5	6178.05000.00.04	Nut	4
6-6	469.3145.001V.00.00	Nut	6
6-7	474.2470.002V.00.00	Inverter	1
6-8	467.3410.003V.00.00	Ground wire	1
6-9	474.2473.001V.00.00	Fixed ears of inverter	1
6-10	474.2473.002V.00.00	Fixed ears of inverter	1
6-11	5789.06012.00.01	Bolt	4
6-12	0818.05016.00.07	Cross recessed pan head screw	1
6-13	P75.4100.001V.00.00	Shim	1

CONTROL PANEL ASSEMBLY/ PANEL HOLDER

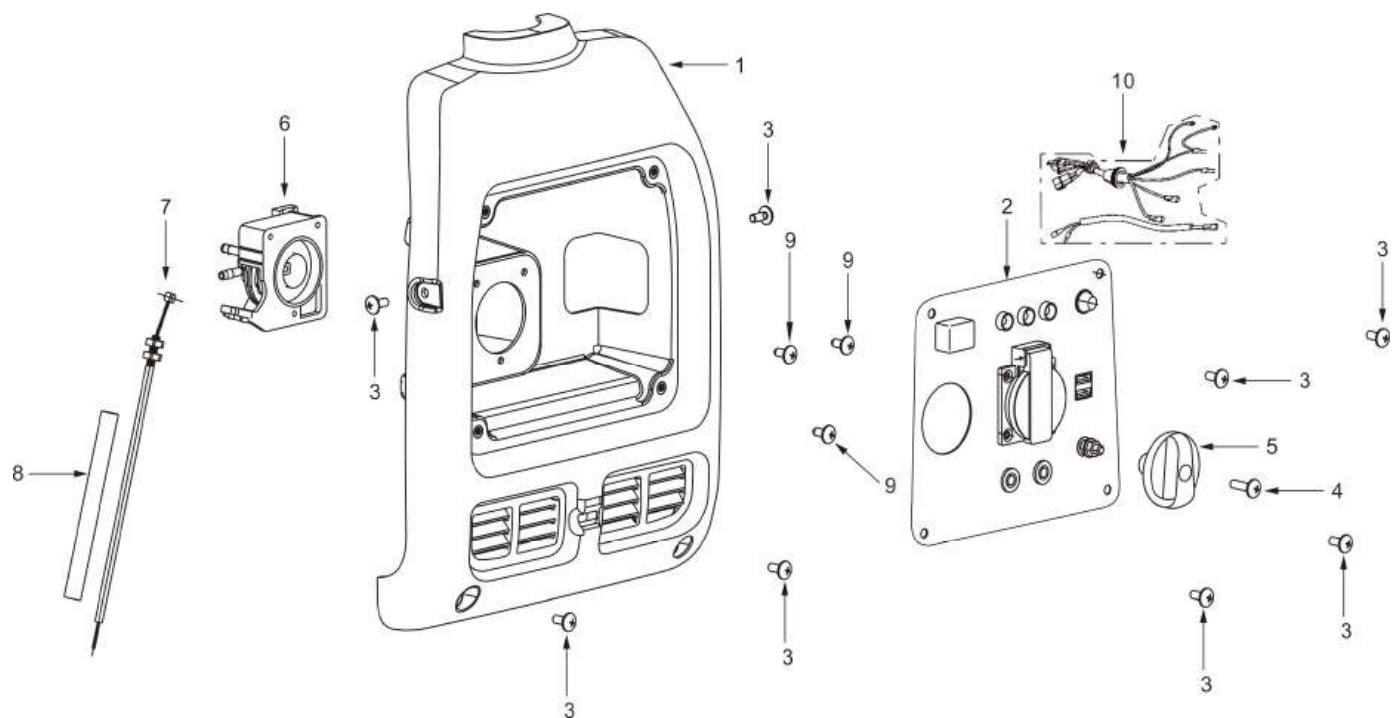

REF.NO.	PART NO	DESCRIPTION	Q'TY
7-1	469.6655.002V.00.00	panel bed	1
7-2	474.3370.005V.00.99	panel	1
7-3	0818.05016.00.07	Cross recessed pan head screw	8
7-4	0818.04014.00.01	Screw	1
7-5	467.2141.001V.A6.00	Three in one switch handle	1
7-6	467.2140.011V.00.00	Three in one switch	1
7-7	467.2140.011V.00.03	Cable assembly	1
7-8	467.2332.002V.00.00	Sheath	1
7-9	0819.04212.00.01	Cross countersunk head tapping screw	3
7-10	469.6950.002V.00.01	Control harness	1