



A-1 CRANKCASE ASSY

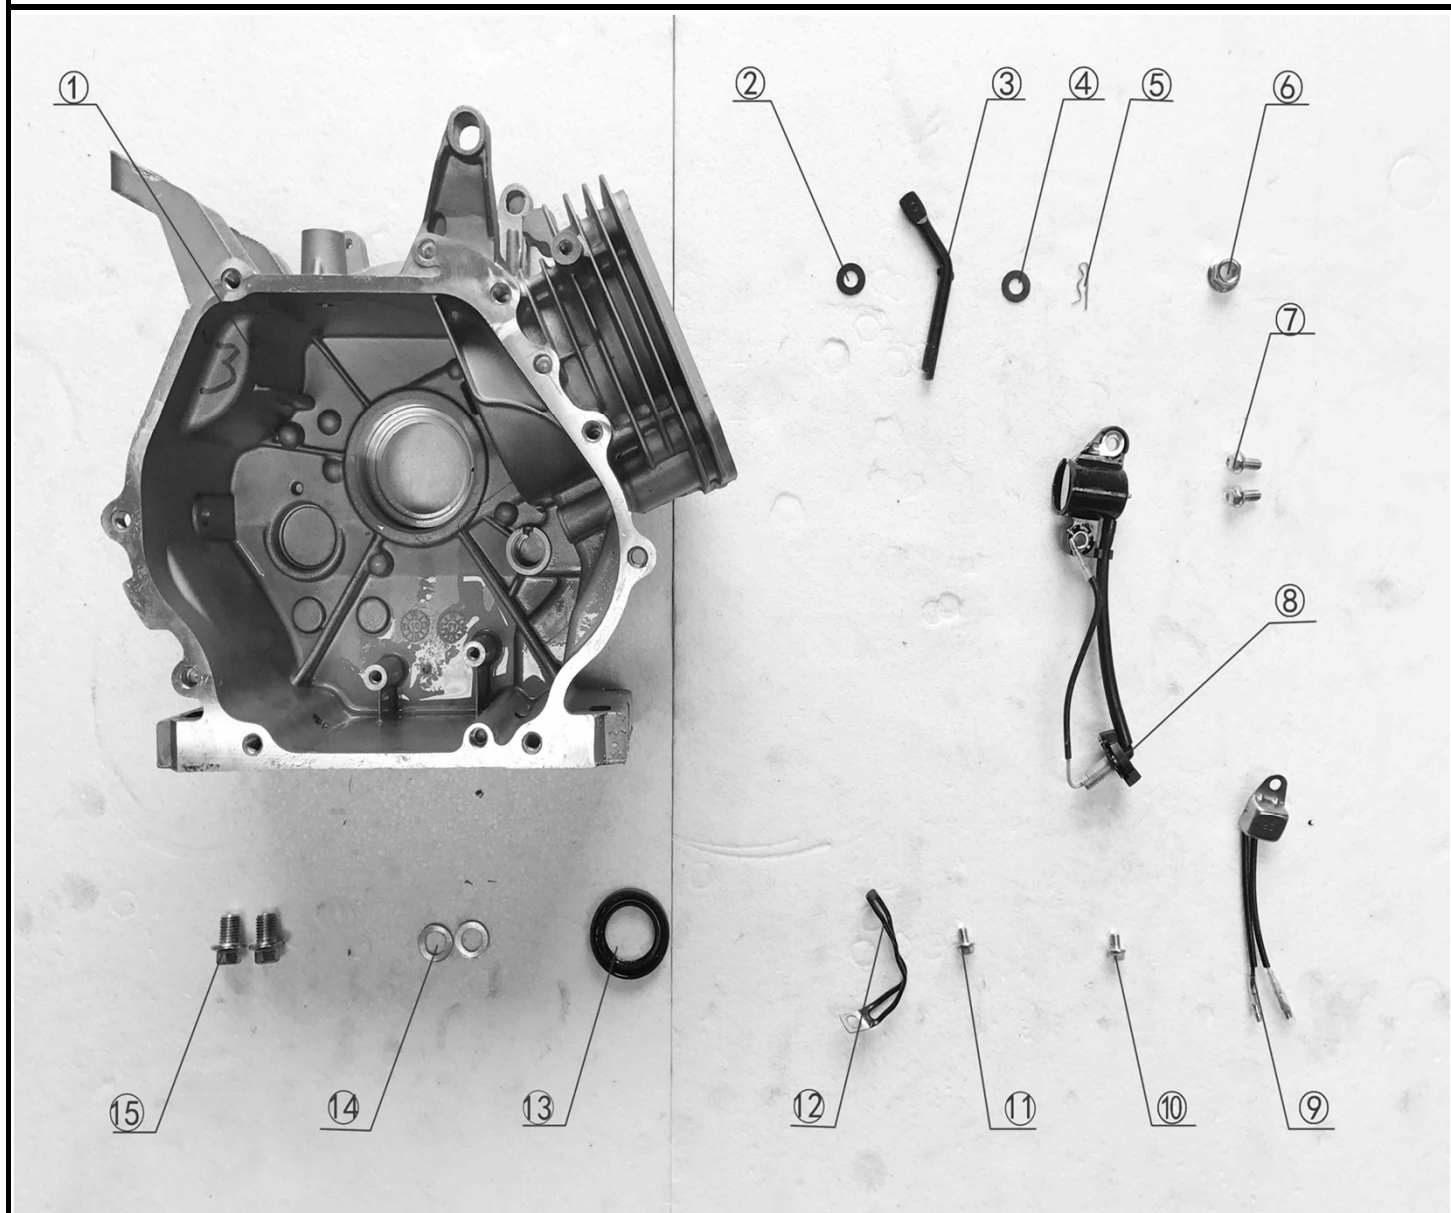


No.	Part name	Qty	No.	Part name	Qty
1	crank-case	1	9	Unidirectional connector	1
2	shim,SHAFT GOVERNOR ARM	1	10	BOLT FLANGE	1
3	SHAFT GOVERNOR ARM	1	11	BOLT FLANGE	1
4	shim,SHAFT GOVERNOR ARM	1	12	cable clamp	1
5	Clip,SHAFT GOVERNOR ARM	1	13	crankshaft seal	1
6	Nut,oil-alert	1	14	WASHER DRAIN PLUG	2
7	BOLT FLANGE	2	15	BOLT DRAIN PLUG	2
8	oil alert	1			

A-2 CYLINDER HEAD & CYLINDER HEAD COVER ASSY

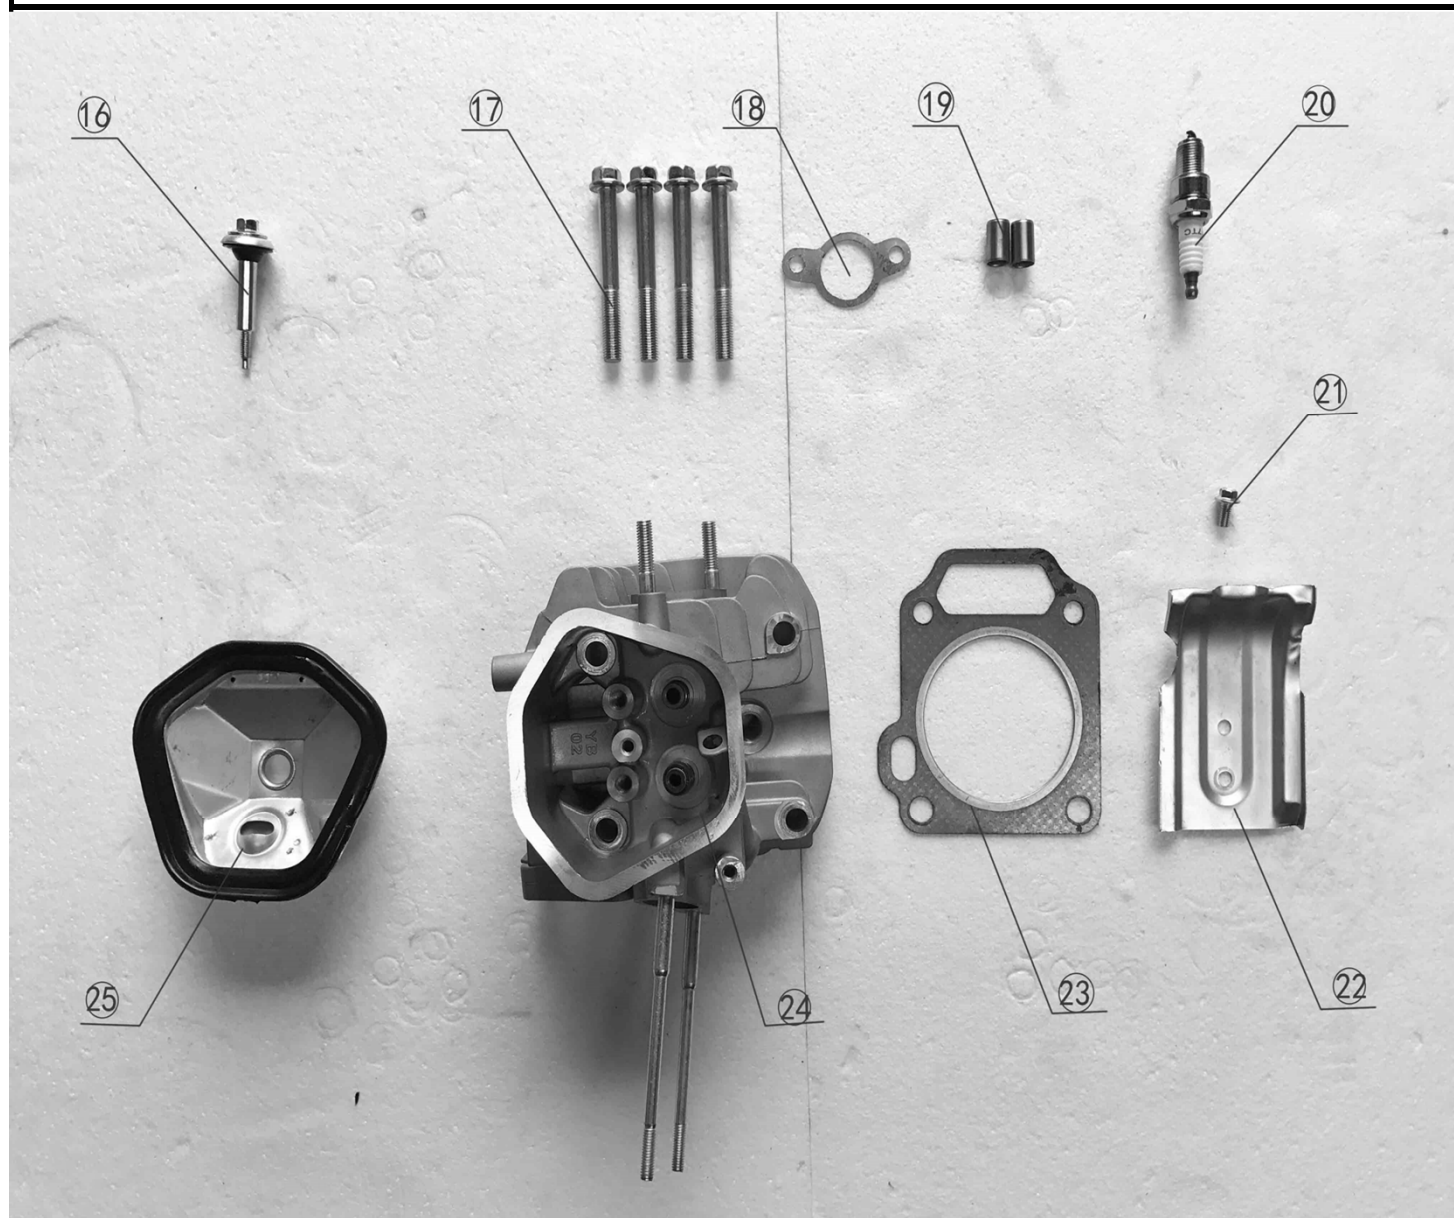


No.	Part name	Qty	No.	Part name	Qty
16	Cylinder head bolt	1	21	BOLT FLANGE	1
17	BOLT FLANGE	4	22	Diversion hood	1
18	Exhaust pipe Paper pad	1	23	cylinder gasket	1
19	Location Pin	2	24	cylinder head	1
20	spark plug	1	25	cylinder head cover	1

A-3 CRANKCASE COVER ASSY

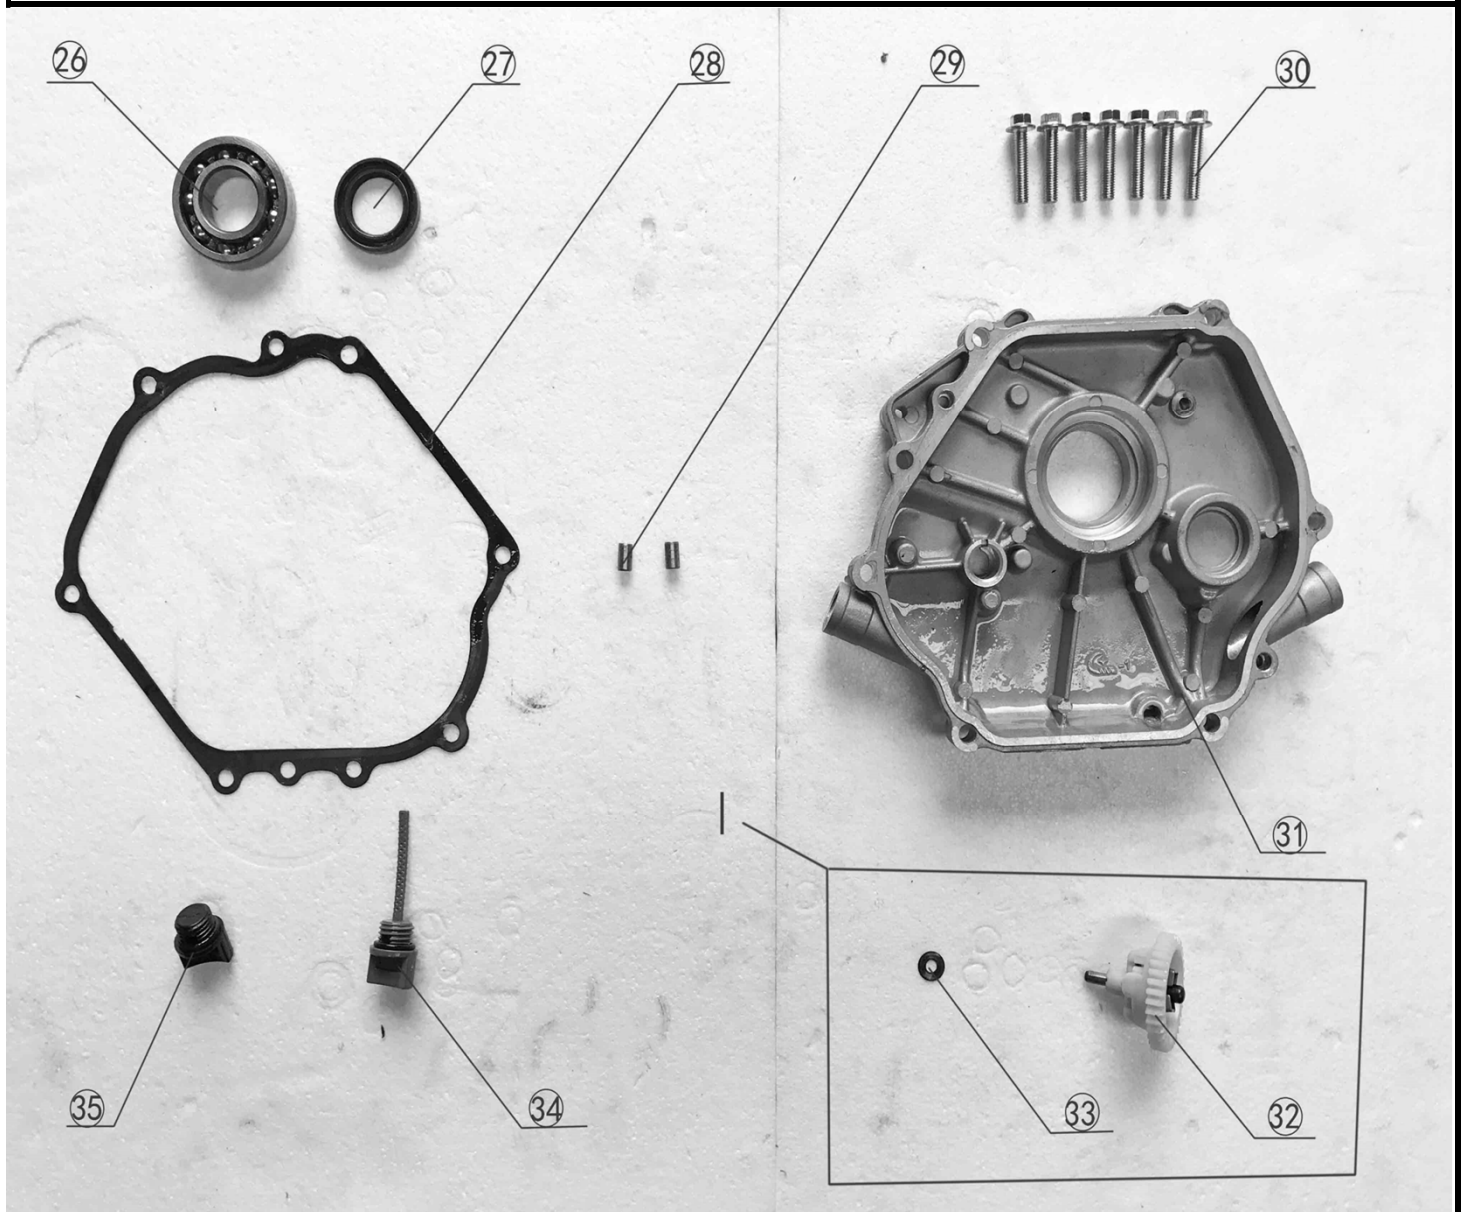


No.	Part name	Qty	No.	Part name	Qty
26	bearing	1	32	Speed regulating gear components	1
27	crankshaft seal	1	33	Speed regulating gear gasket	1
28	Crankcase gasket	1	34	Oil Ruler Assembly	1
29	loaction Pin	2	35	Oil plug assembly	1
30	BOLT FLANGE	7	I	Speed regulating gear components	1
31	crank-case cover	1			

A-4 CRANKSHAFT, PISTON, CONNECTING & BALANCING SHAFT

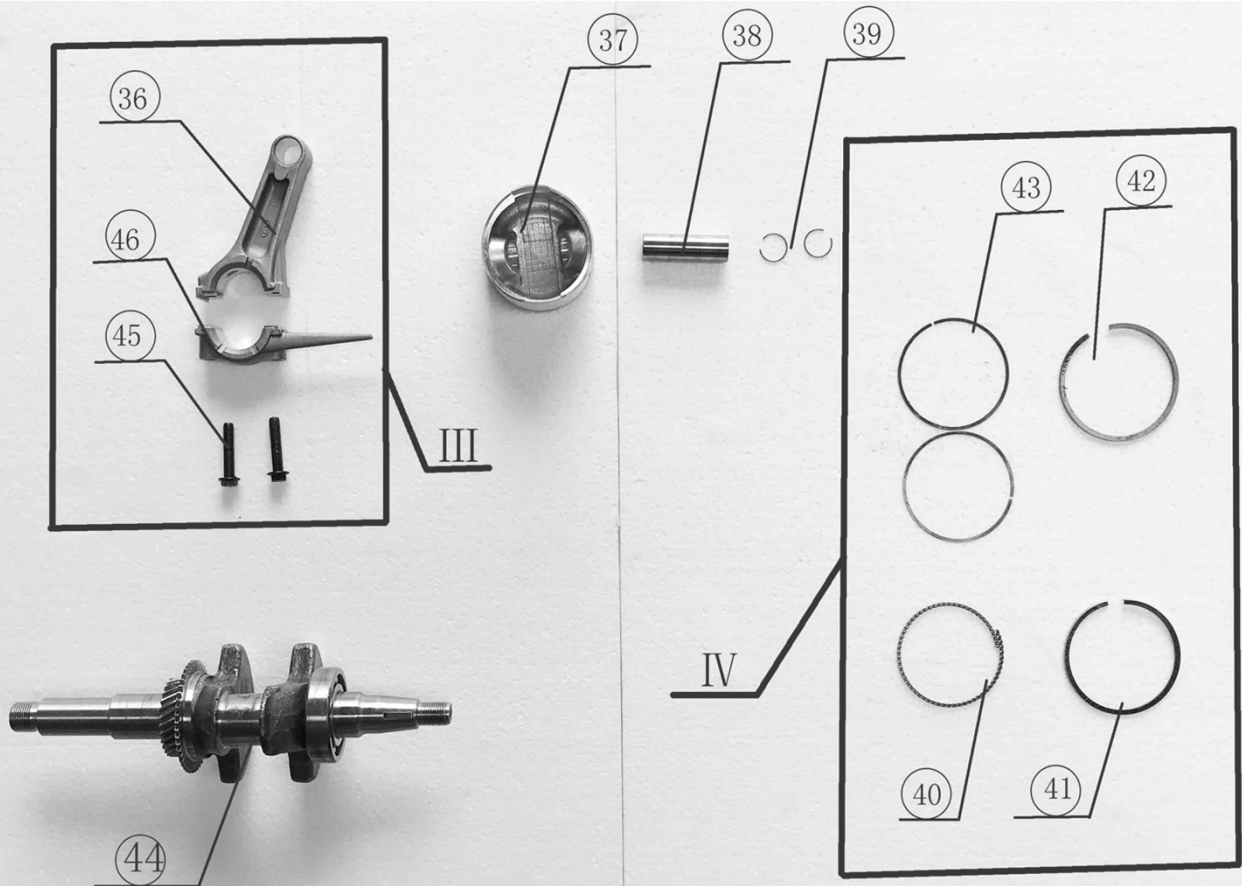


No.	Part name	Qty	No.	Part name	Qty
36	connecting rod	1	43	Oil ring scraper ring	2
37	piston pin	1	44	crankshaft	1
38	Piston pin Retaining ring	2	45	connecting rod bolt	1
39	piston	1	46	connecting rod cover	1
40	Oil ring lining ring	1	II	Piston Ring	1
41	piston ring A	1	III	connecting rod Assy.	1
42	piston ring B	1			

A-5 Combination of camshaft & Valve rocker

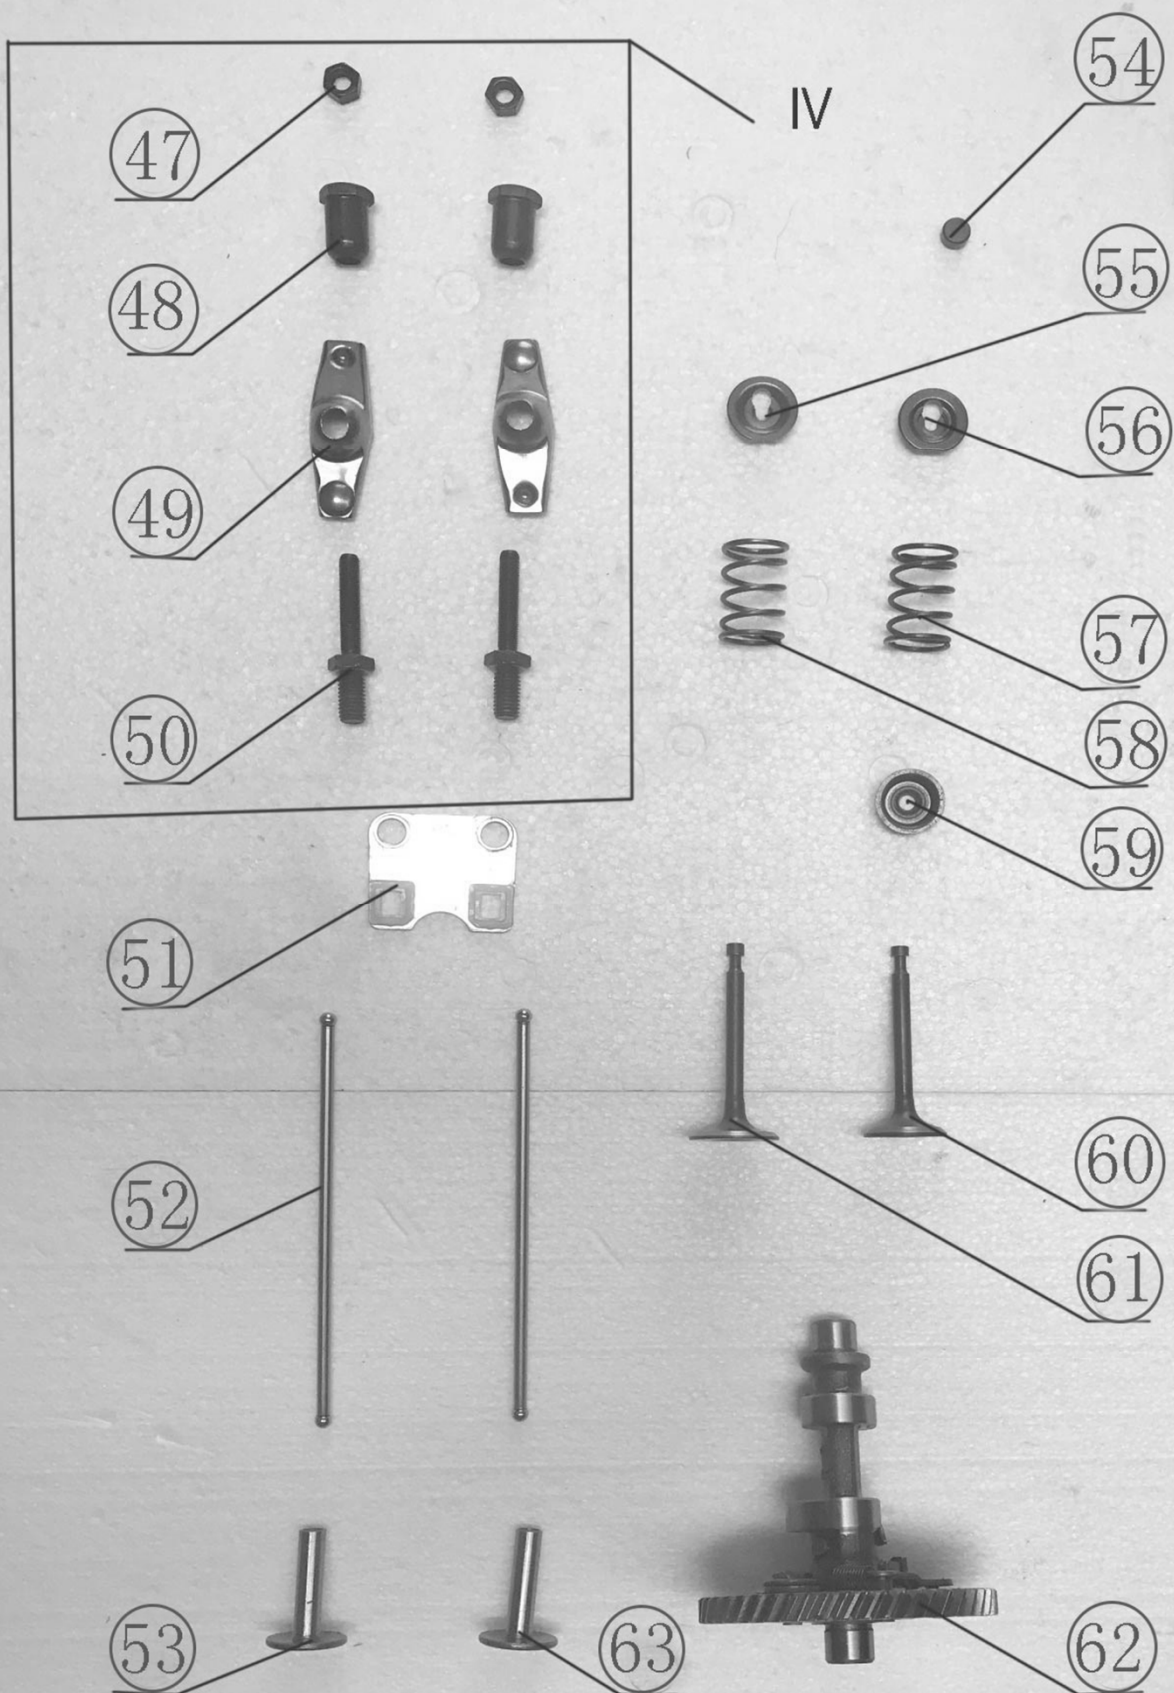

No.	Part name	Qty	No.	Part name	Qty
47	Rocker Hexagon Head Nut	2	56	Inlet valve spring seat	1
48	Rocker arm adjusting nut	2	57	Inlet valve spring seat	1
49	ARM VALVE ROCKER	2	58	Exhaust valve spring	1
50	Stud bolt,rocker arm	2	59	Oil shield	1
51	PLATE ASSY	1	60	VALVE IN	1
52	LEFTER VALVE	2	61	VALVE EX	1
53	LEFTER VALVE	1	62	camshaft	1
54	Valve top cap	2	63	LEFTER VALVE	1
55	Exhaust valve spring seat	1	IV	rocker arm Assy	1

A-6 CARBURETOR ASSY

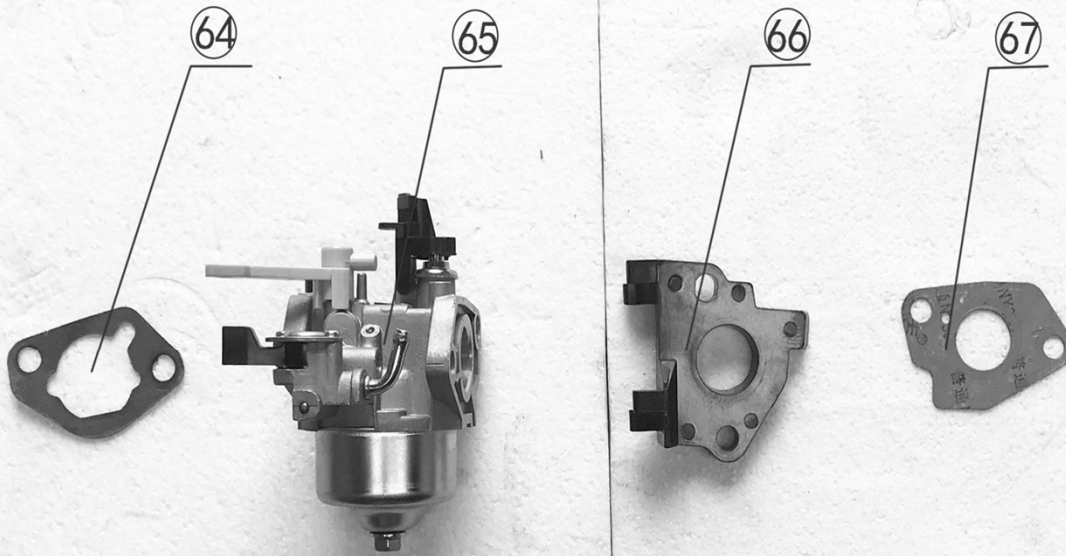


No.	Part name	Qty	No.	Part name	Qty
64	PACKING CABURETOR	1	66	INSULATOR CARBURETOR	1
65	CARBURETOR	1	67	SPACER COMP AIR CLEANER	1

A-7 FUEL TANK ASSY




No.	Part name	Qty	No.	Part name	Qty
68	fuel tank	1	73	cable clamp	2
69	FILTER FUEL	1	74	Hexagonal flange bolt	2
70	fuel tank cap	1	75	NUT	2
71	TUBE FUEL	1	V	FUEL tank	1
72	fixed clamp	1			

A-8 AIR CLEANER ASSY

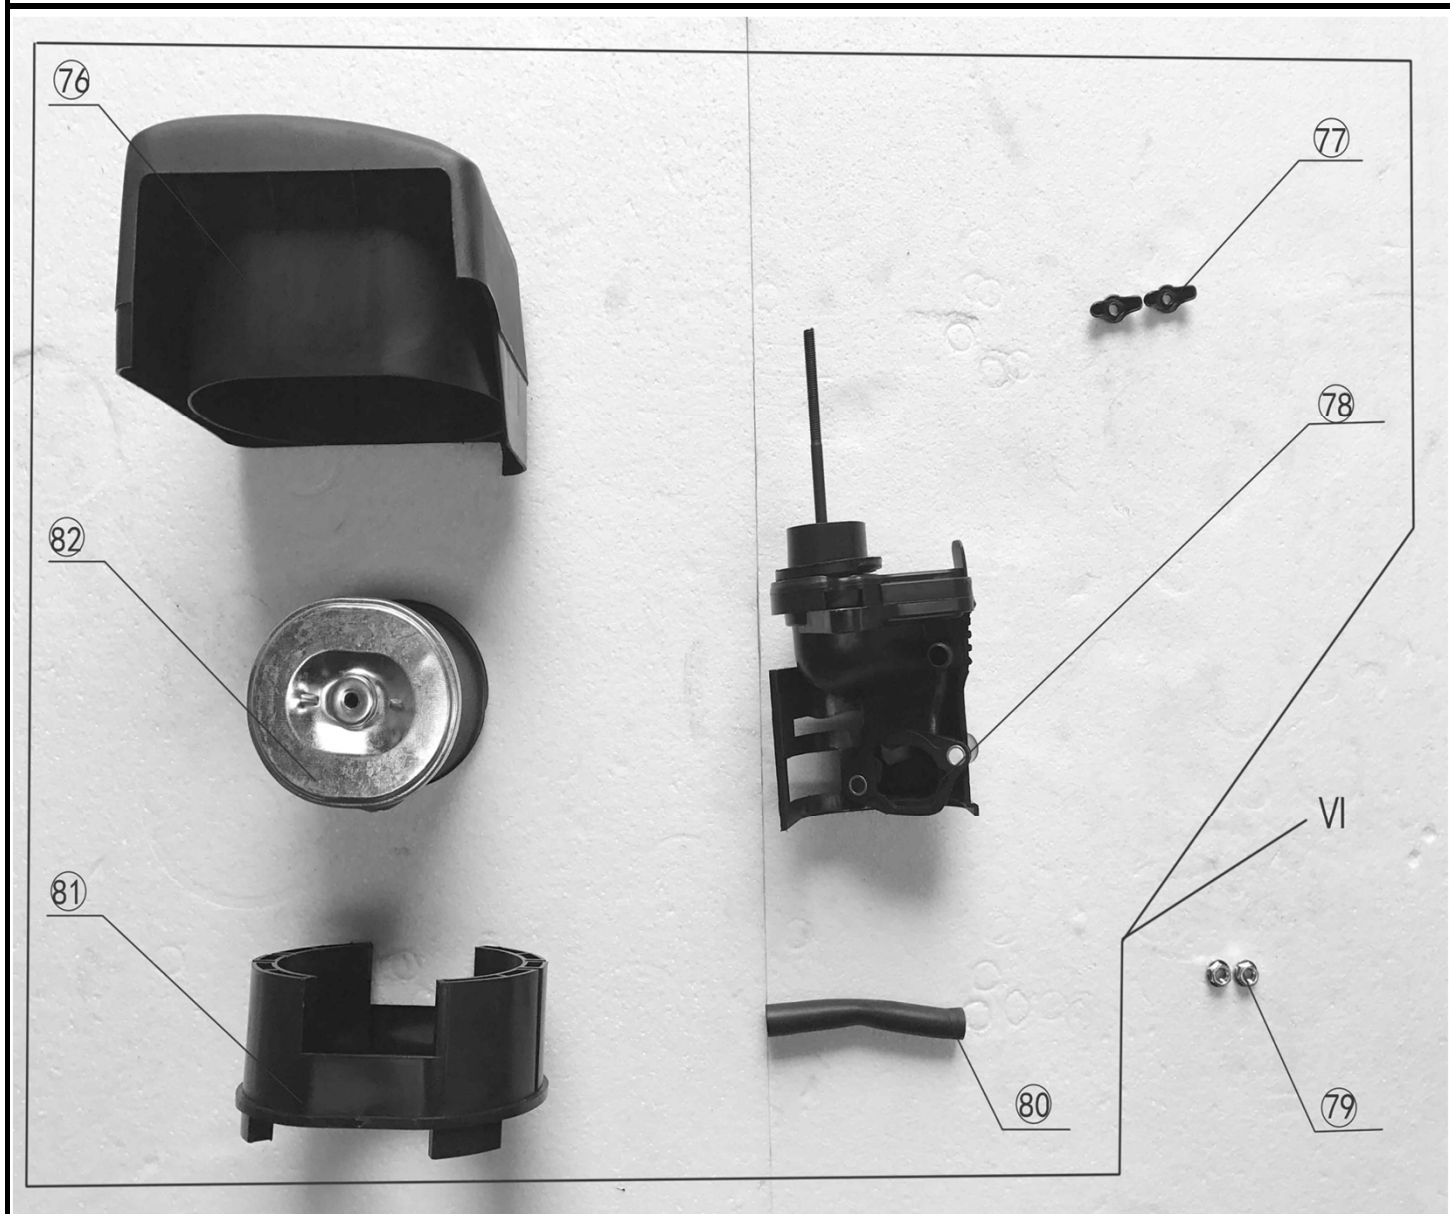


No.	Part name	Qty	No.	Part name	Qty
76	COVER AIR CLEANER	1	80	TUBE BREATHER	1
77	NUT	2	81	NOSE SILENCER	1
78	ELBOW COMP AIR CLEANER	1	82	filter element	1
79	NUT	2	VI	air-filter	1

A-9 MUFFLER

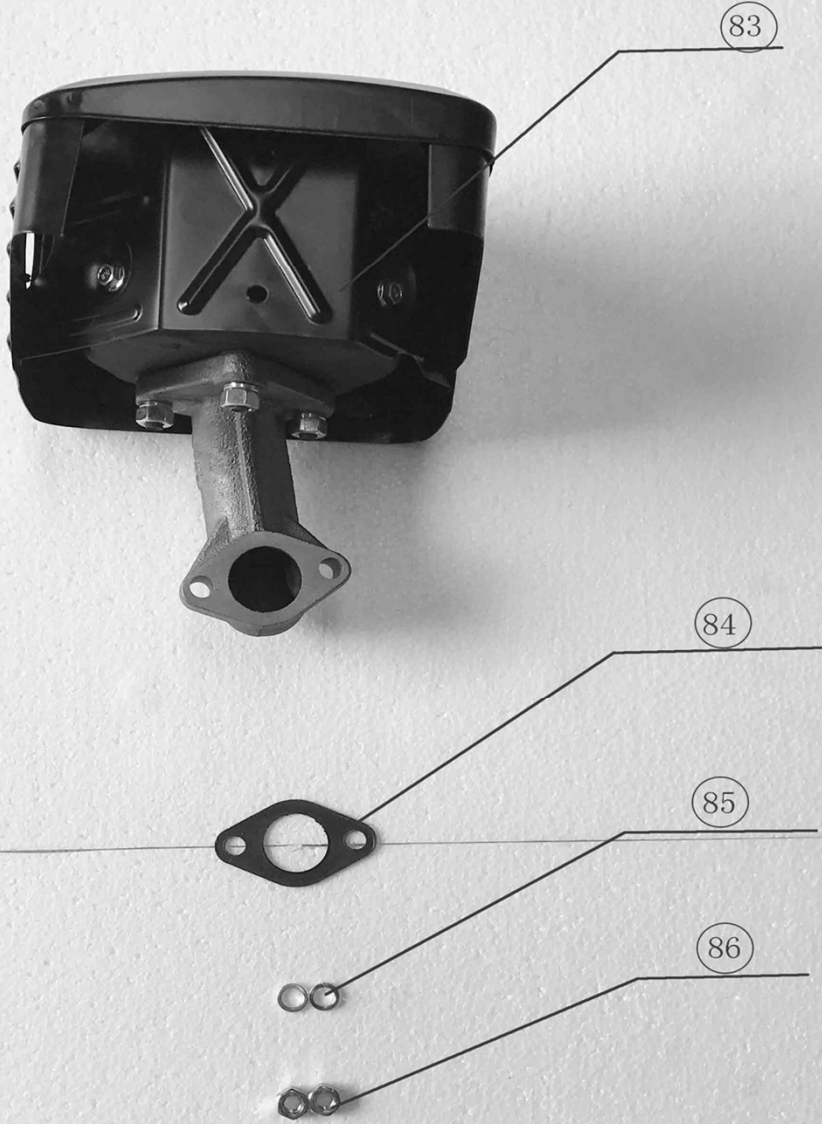


No.	Part name	Qty	No.	Part name	Qty
83	MUFFLER ASSY	1	85	shock pad	2
84	Exhaust pipe Paper pad	1	86	NUT	1

A-10 RECOIL STARTER

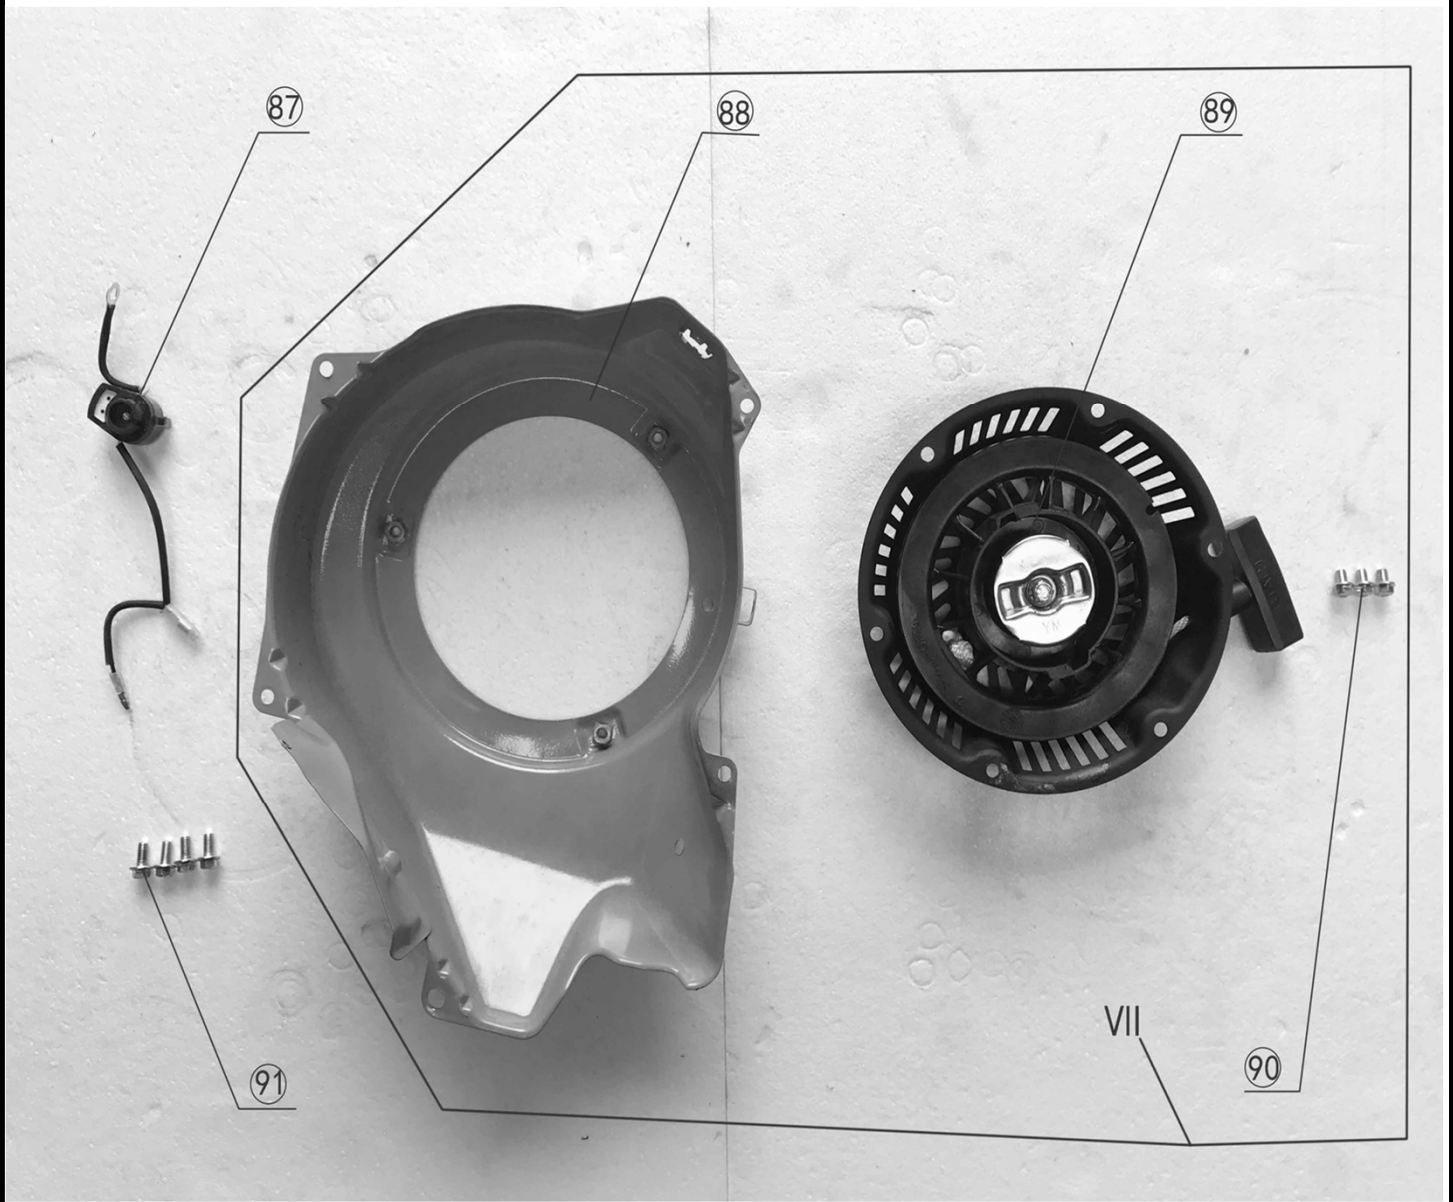


No.	Part name	Qty	No.	Part name	Qty
87	SWITCH ASSY ENGINE STOP(OIL A	1	90	BOLT FLANGE	3
88	COVER COMP FAN	1	91	BOLT FLANGE	4
89	RECOIL STARTER COMP	1	VII	RECOIL STARTER COMP	1

A-11 REGULATING CONTROL SYSTEM

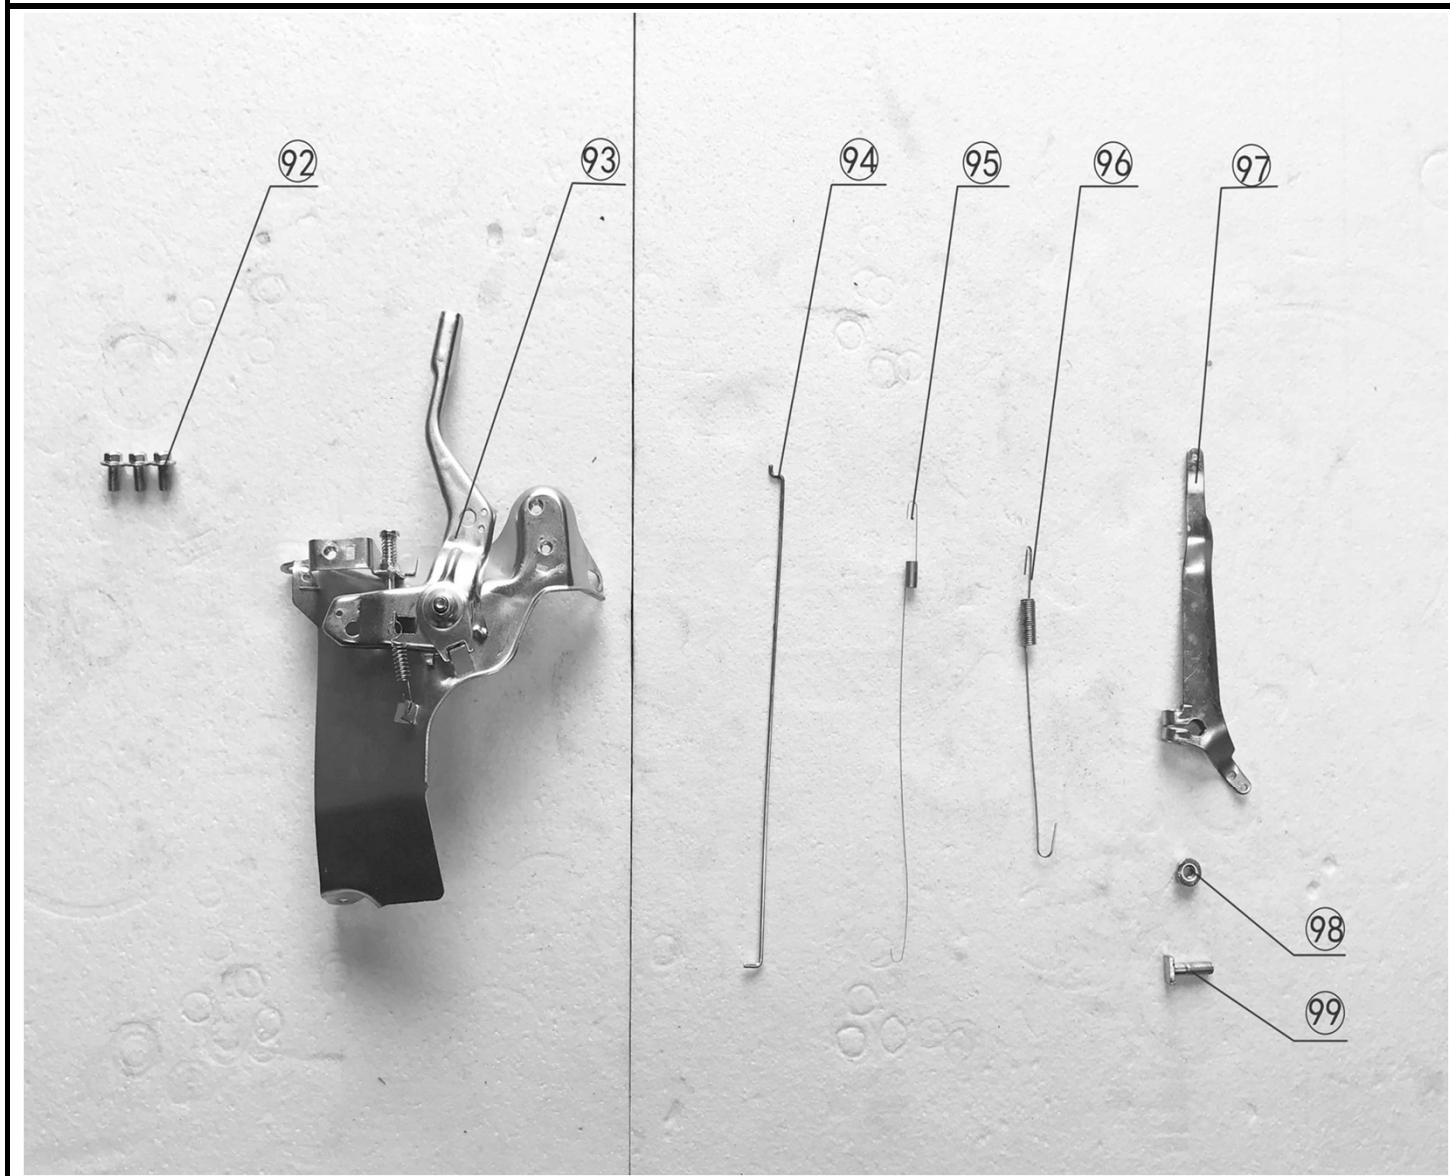


No.	Part name	Qty	No.	Part name	Qty
92	BOLT FLANGE	3	96	SPRING THROTTLE RETURN	1
93	CONTROL ASSY	1	97	ARM GOVERNOR	1
94	ROD GOVERNOR	1	98	NUT	1
95	Fine spring	1	99	BOLT	1

A-12 FLYWHEEL

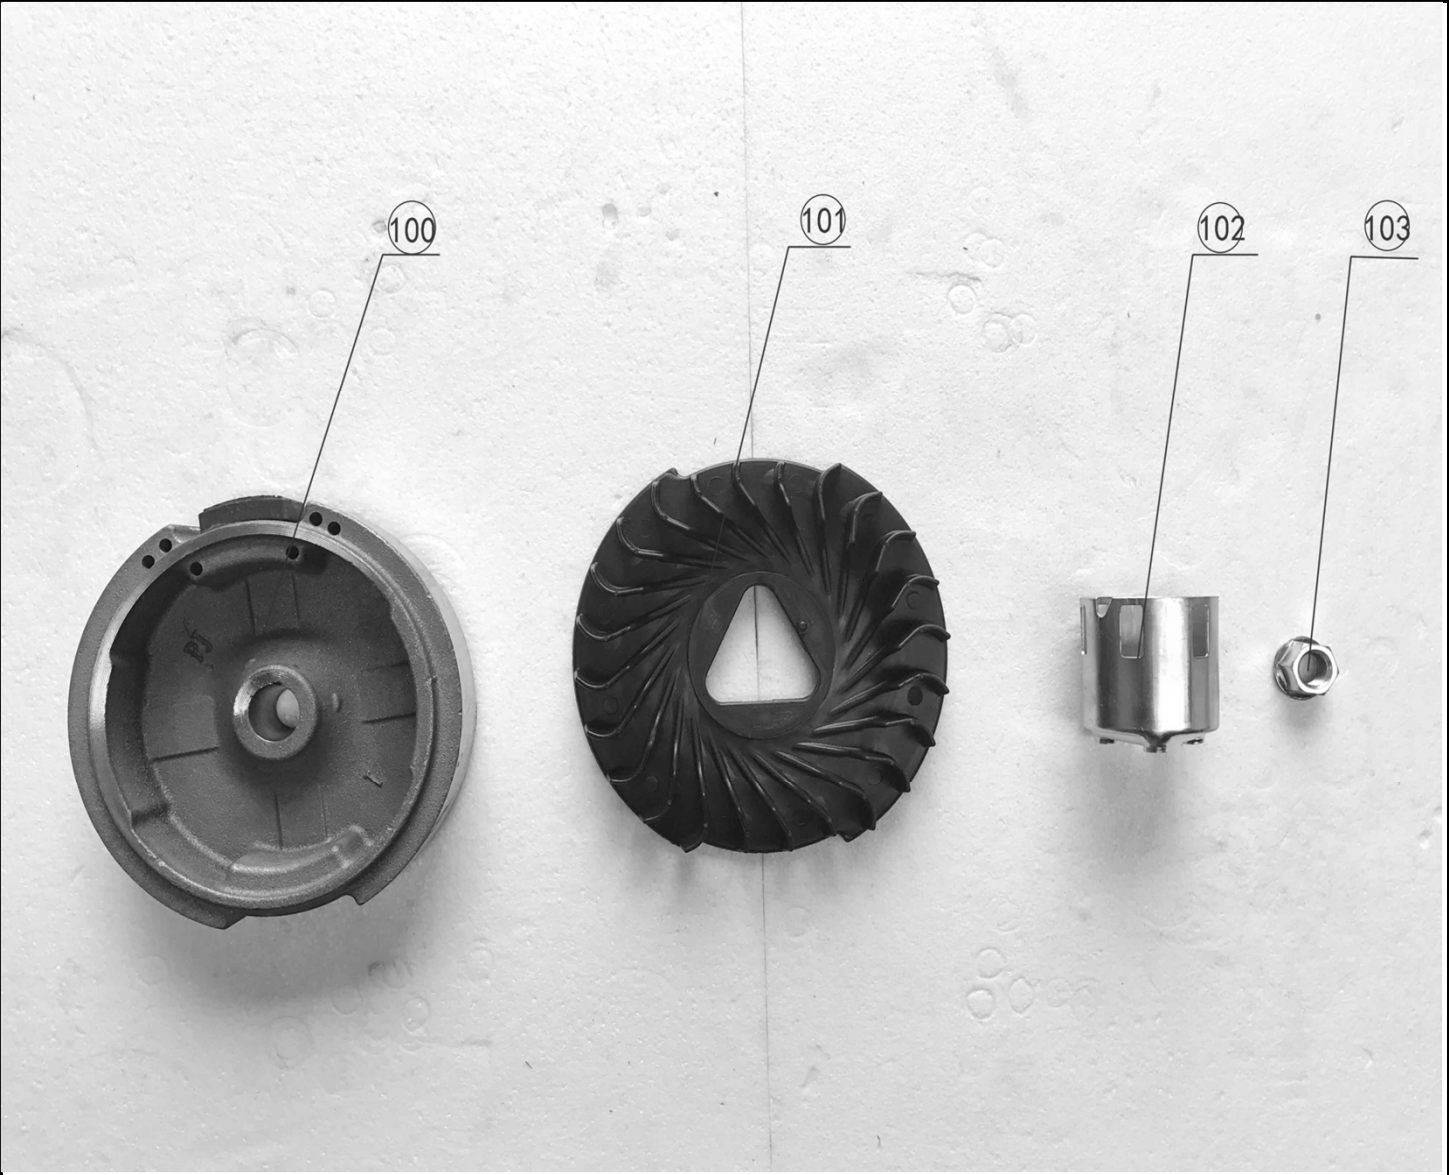

No.	Part name	Qty	No.	Part name	Qty
100	FLYWHEEL COMP	1	102	PULLEY STARTER	1
101	FAN COOLING	1	103	NUT SPECIAL	1

A-13 IGNITION COIL

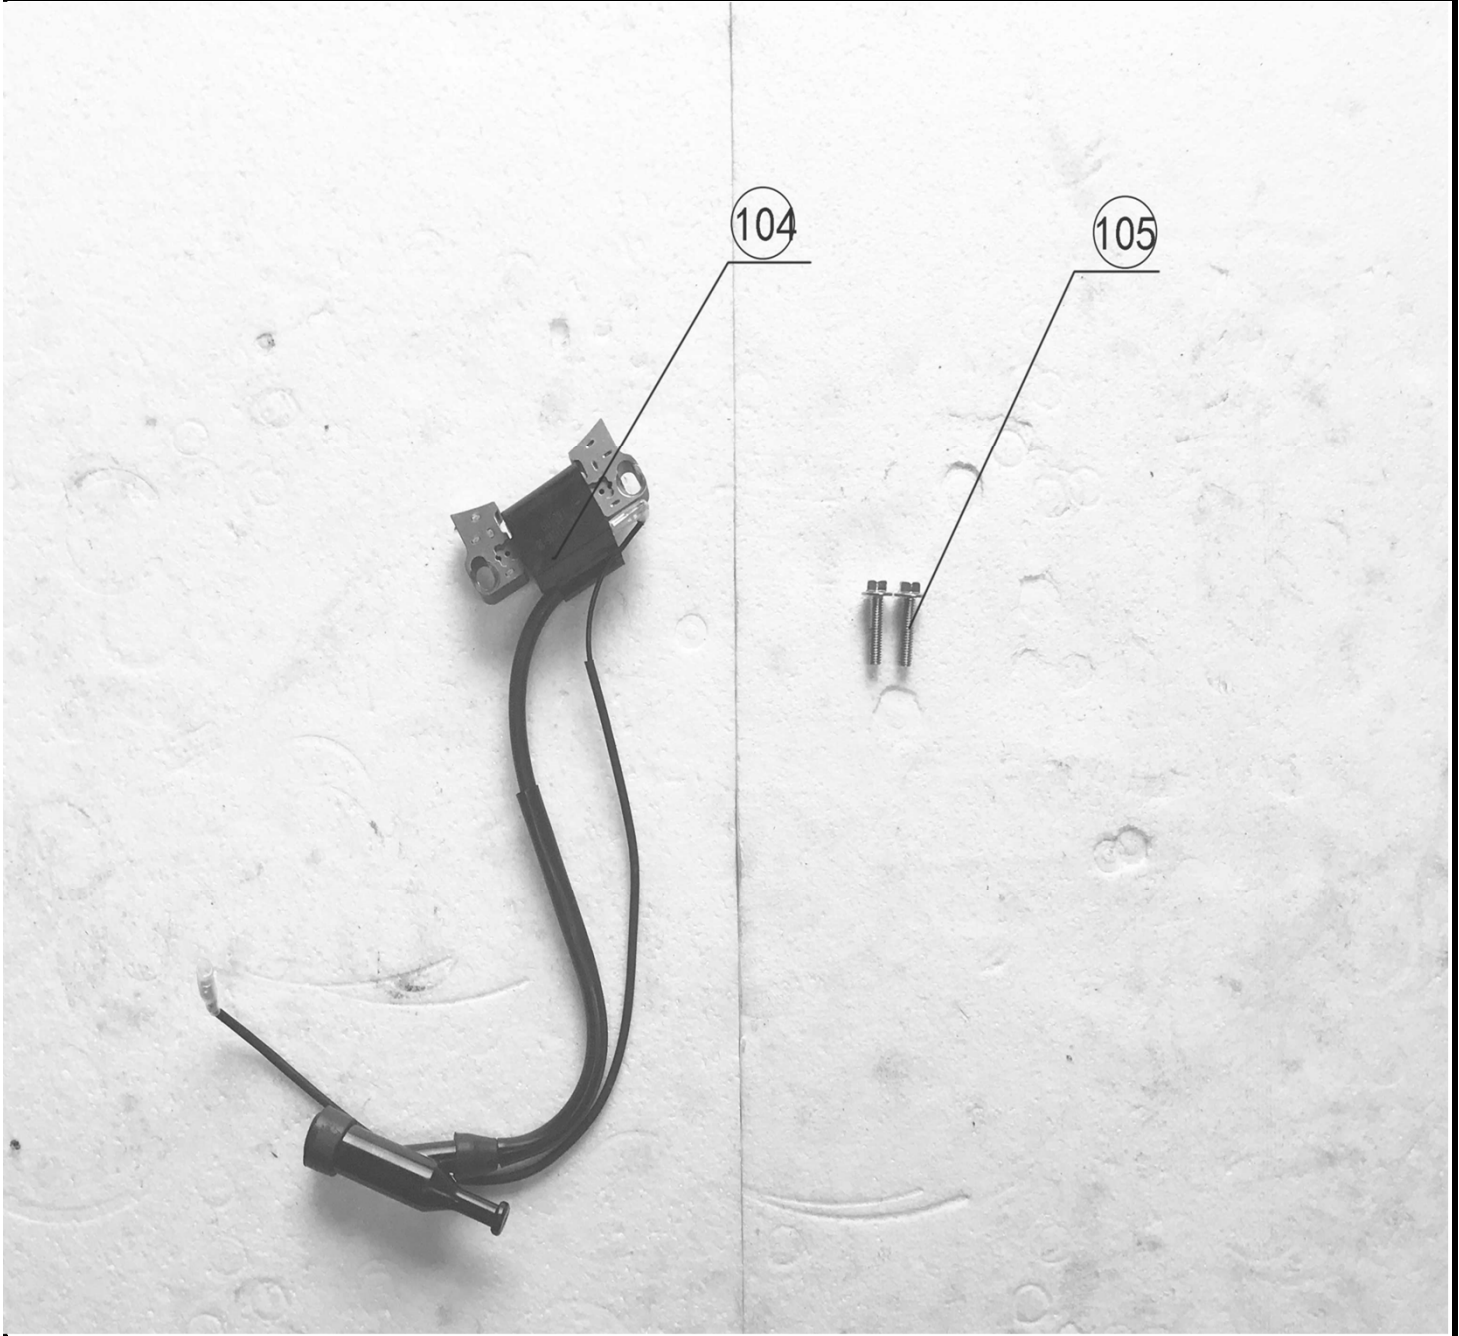

No.	Part name	Qty	No.	Part name	Qty
104	COIL ASSY IGNITION	1	105	BOLT FLANGE	2